

Relle PVC Wall Panel Solution





































Dimension: 60cm wide*2.8m /3m long per pcs* Thickness:9mm.

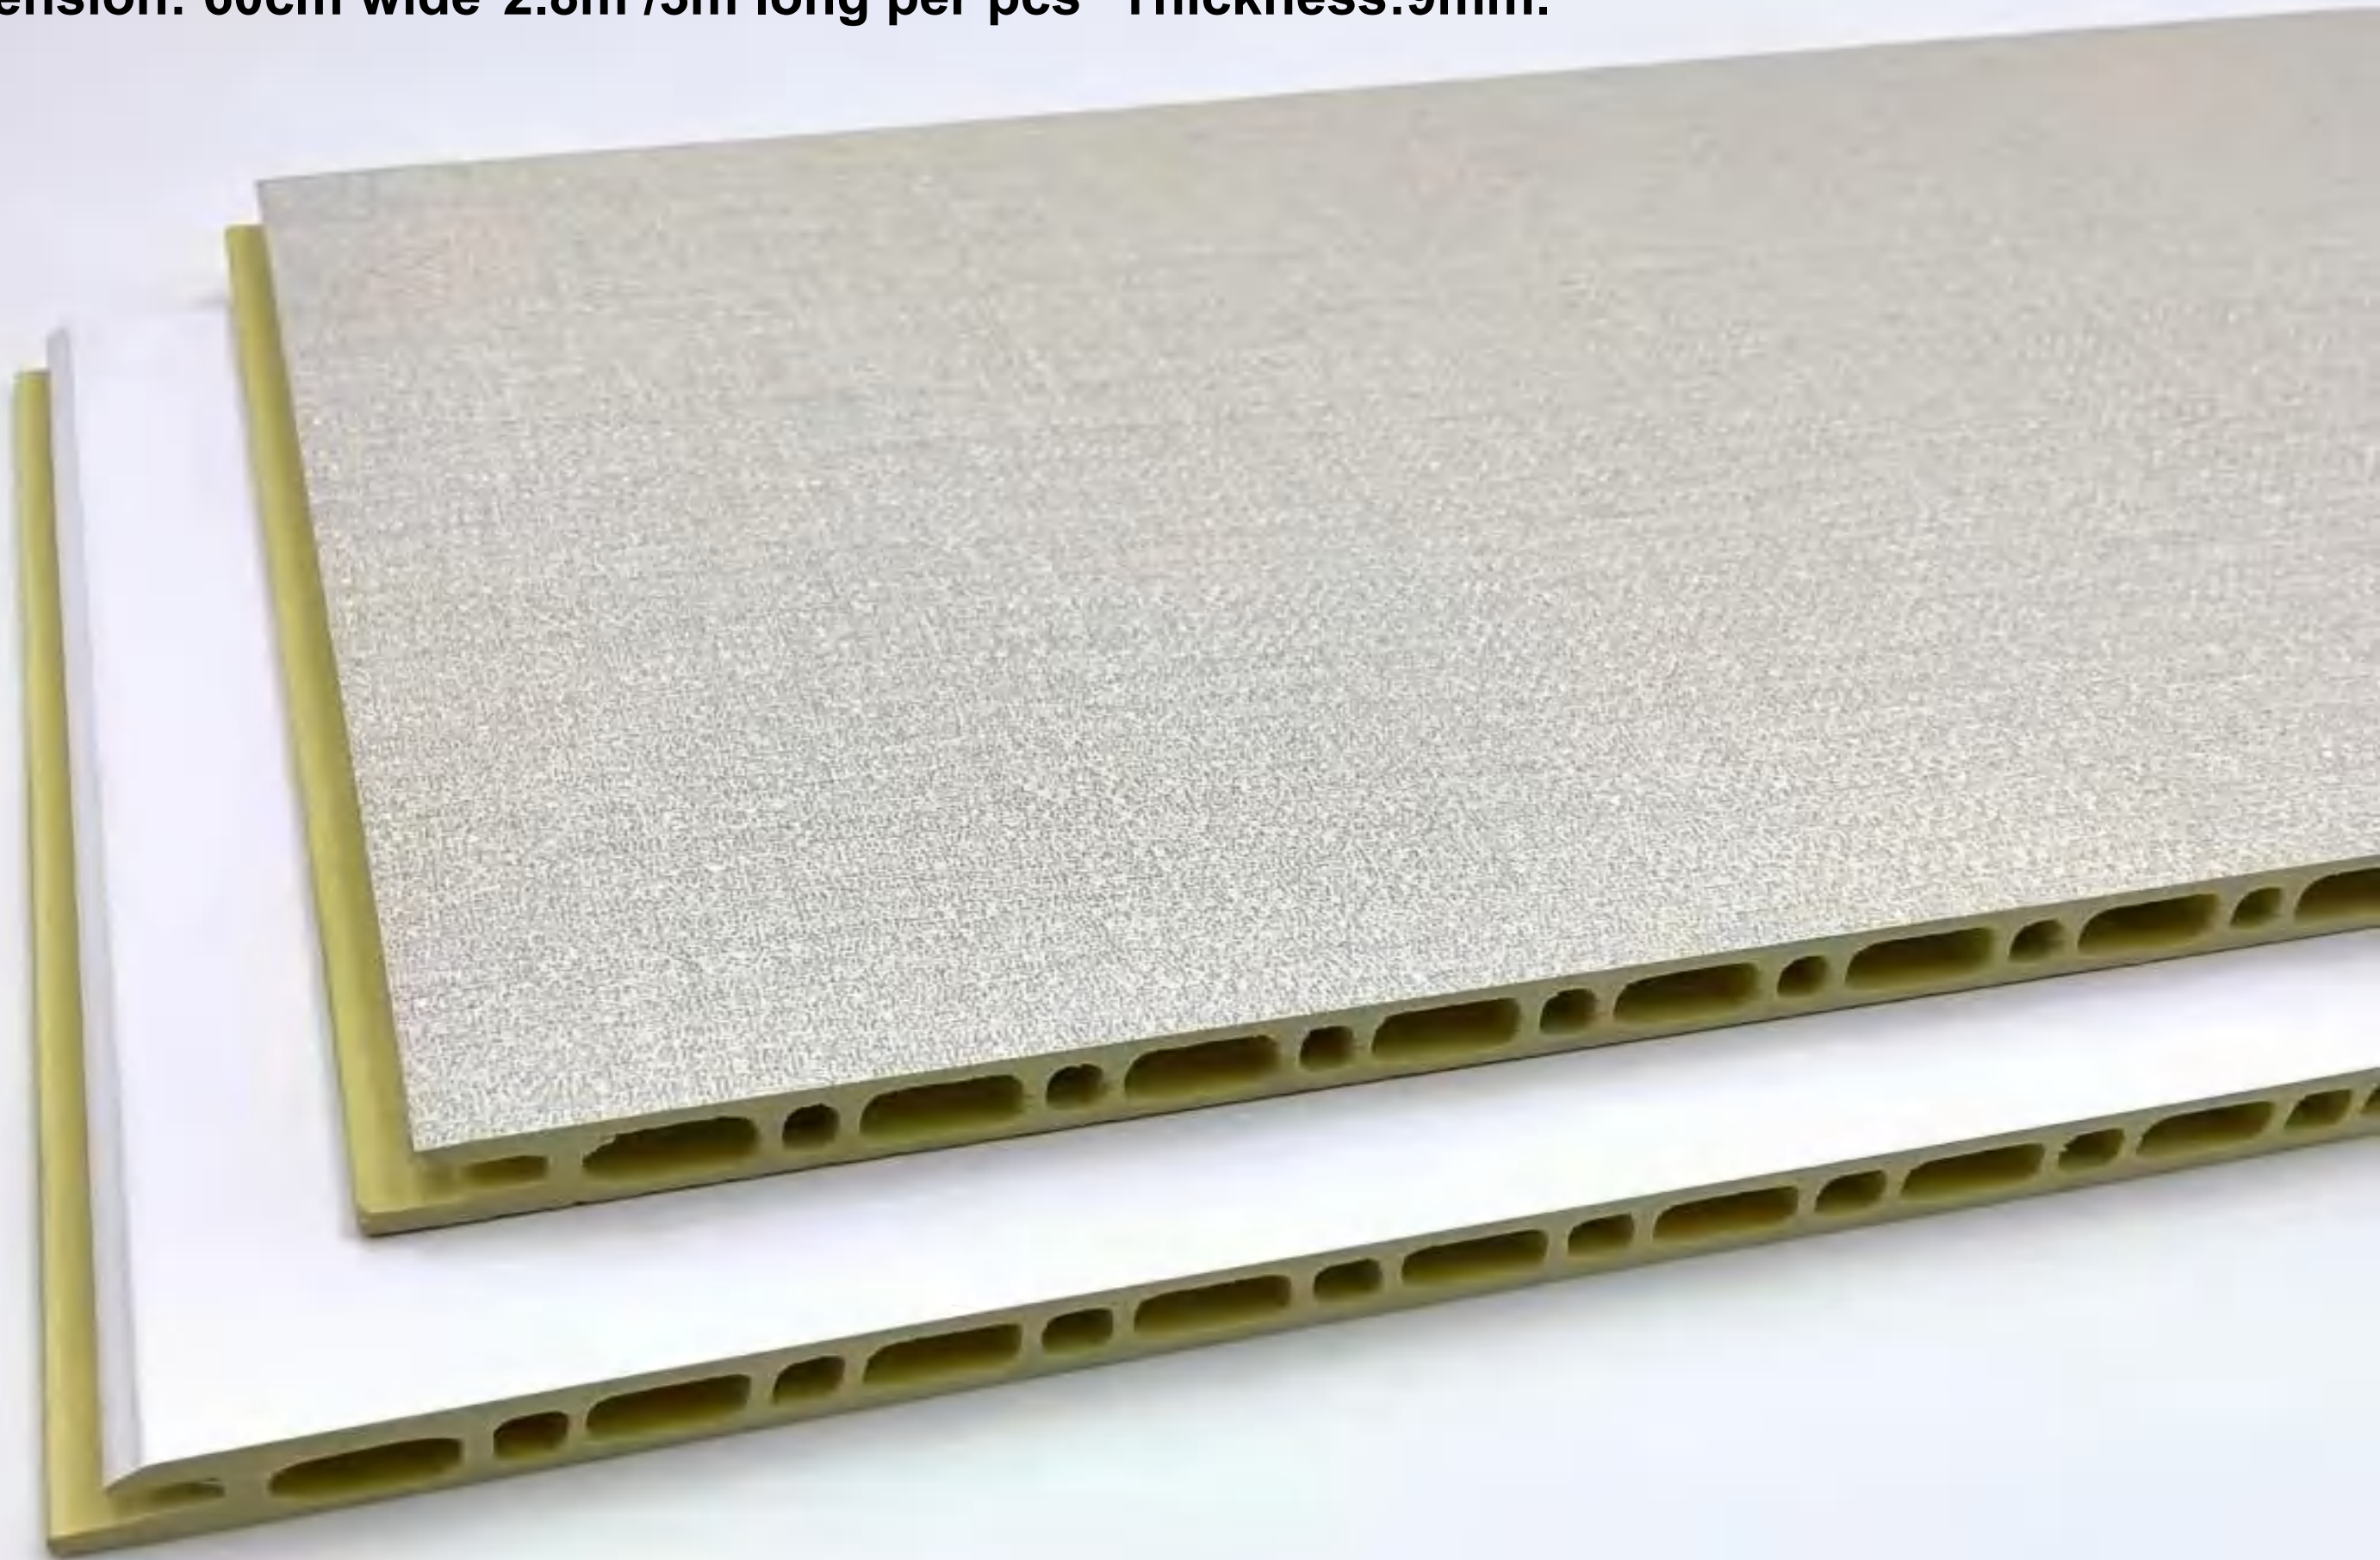


Dimension: 60cm wide*2.8m /3m long per pcs* Thickness:9mm.

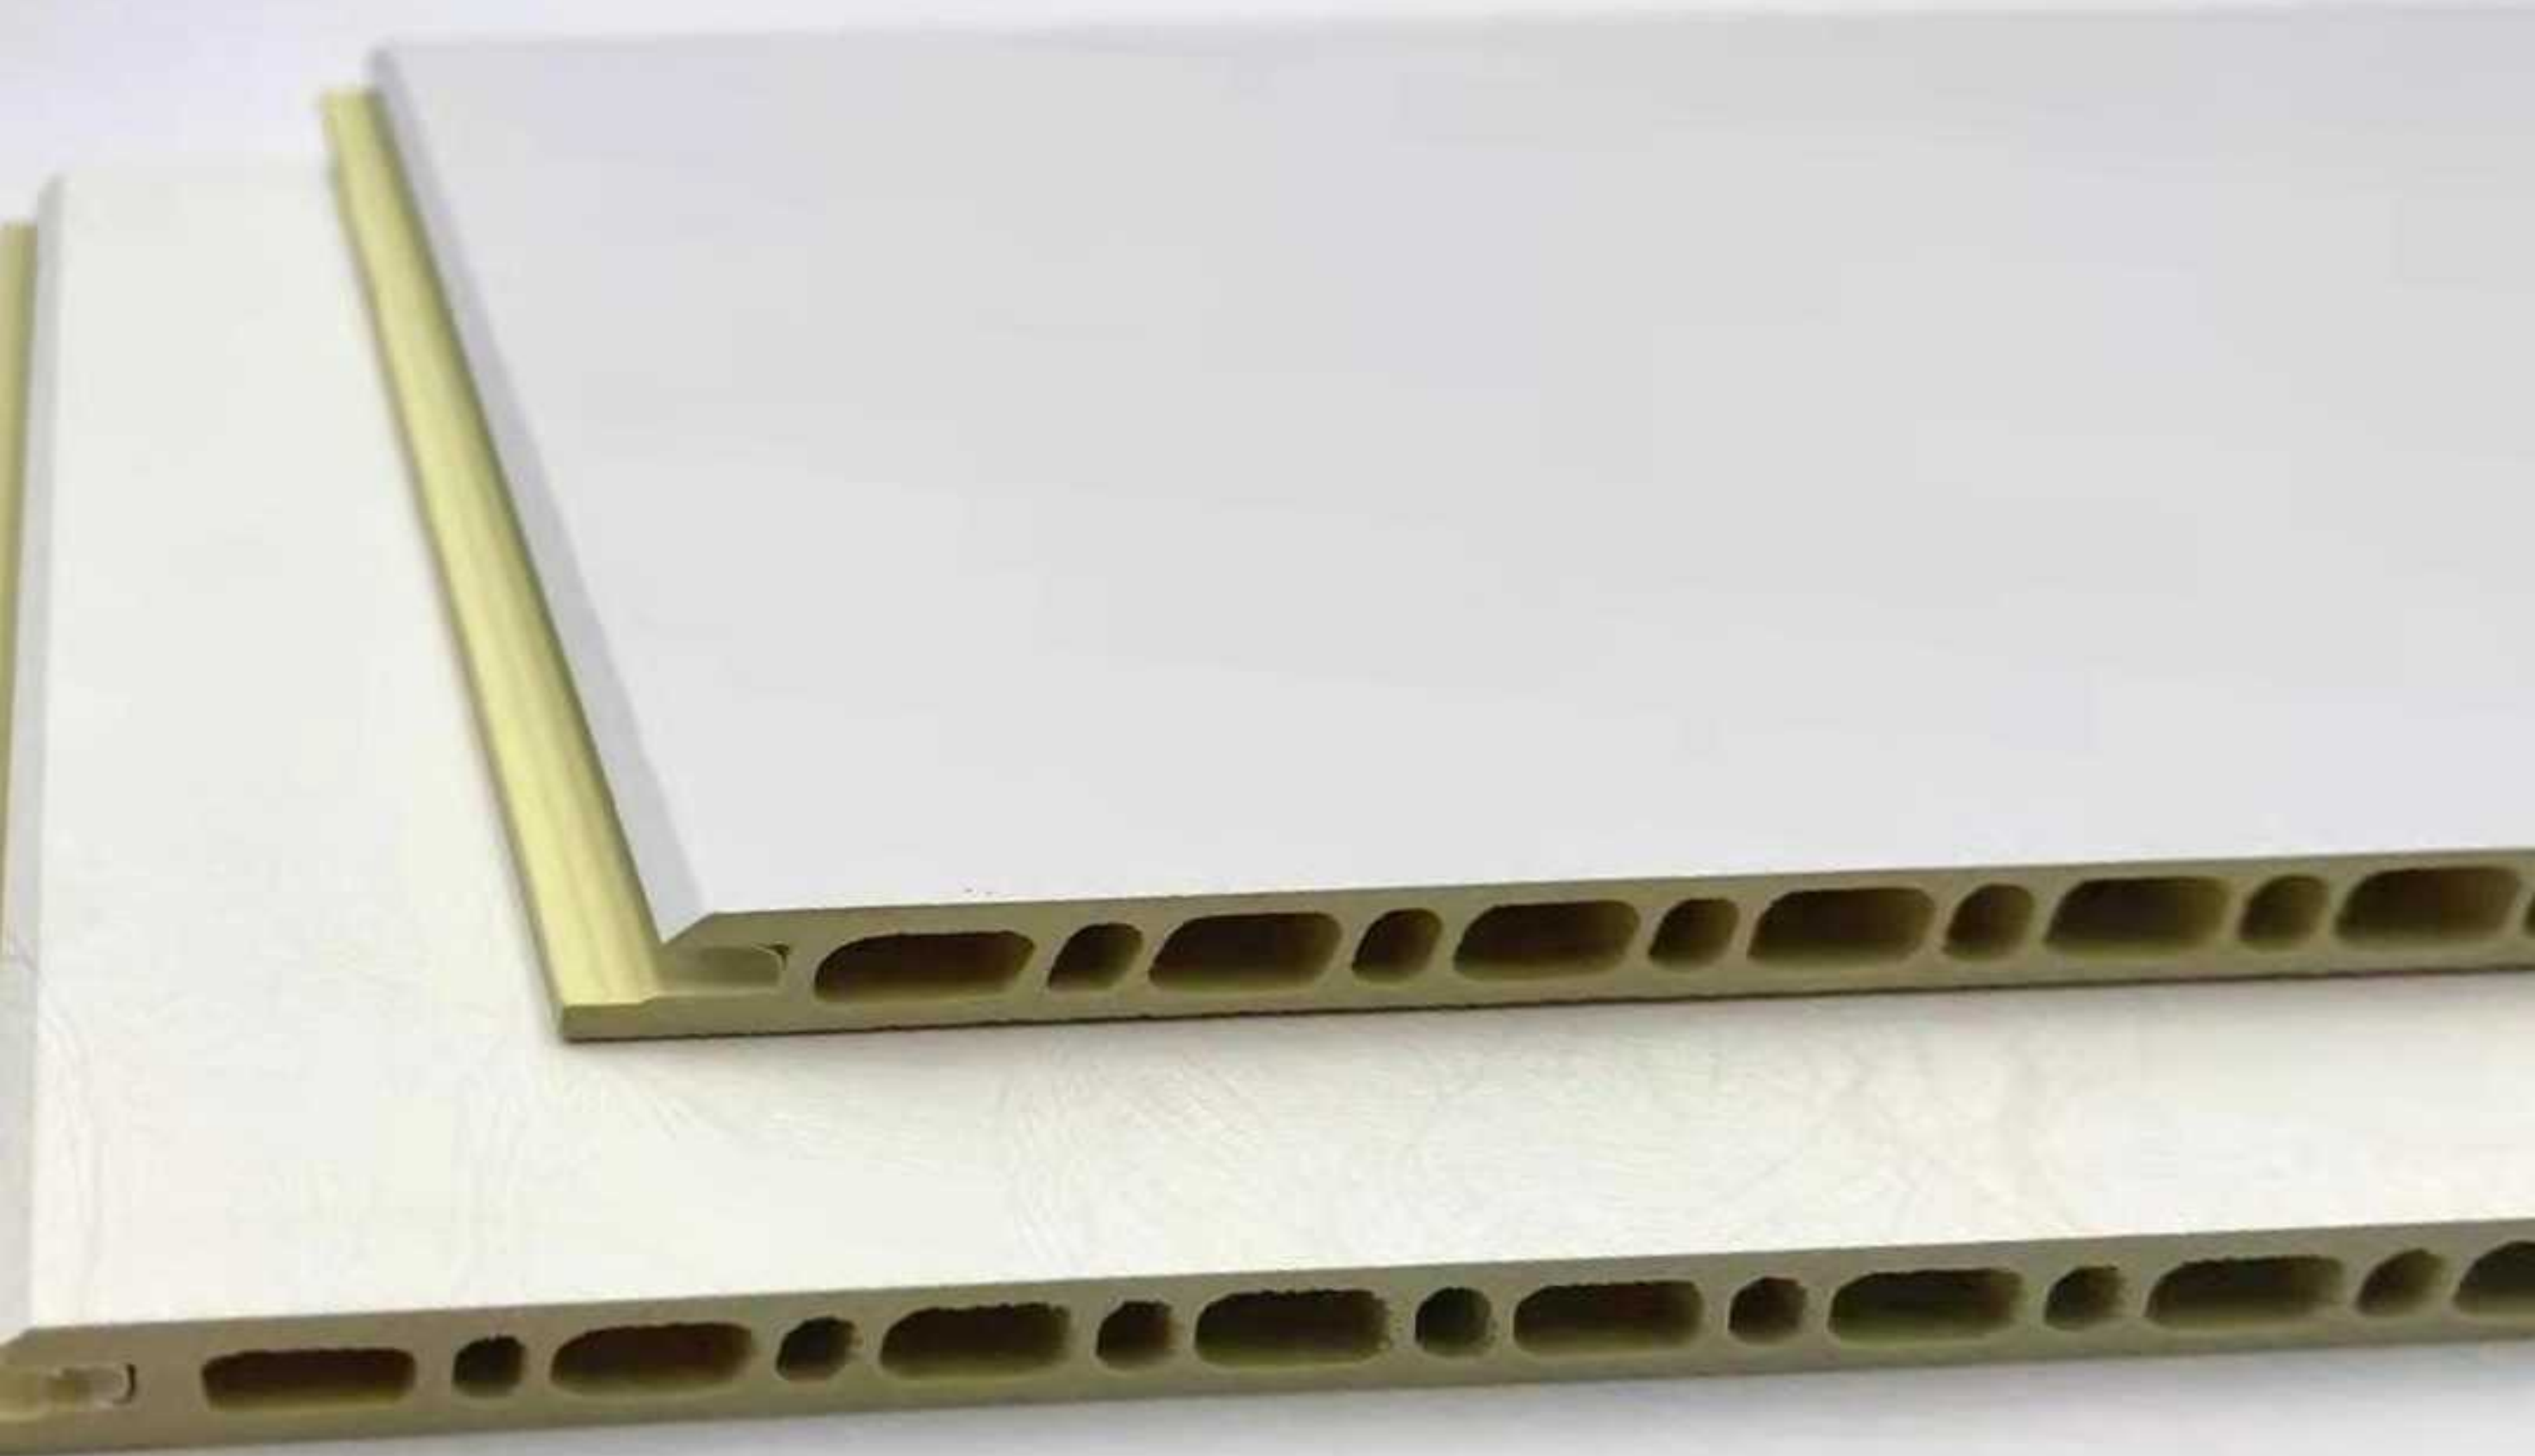

Dimension: 60cm wide*2.8m /3m long per pcs* Thickness:9mm.



Dimension: 60cm wide*2.8m /3m long per pcs* Thickness:9mm.

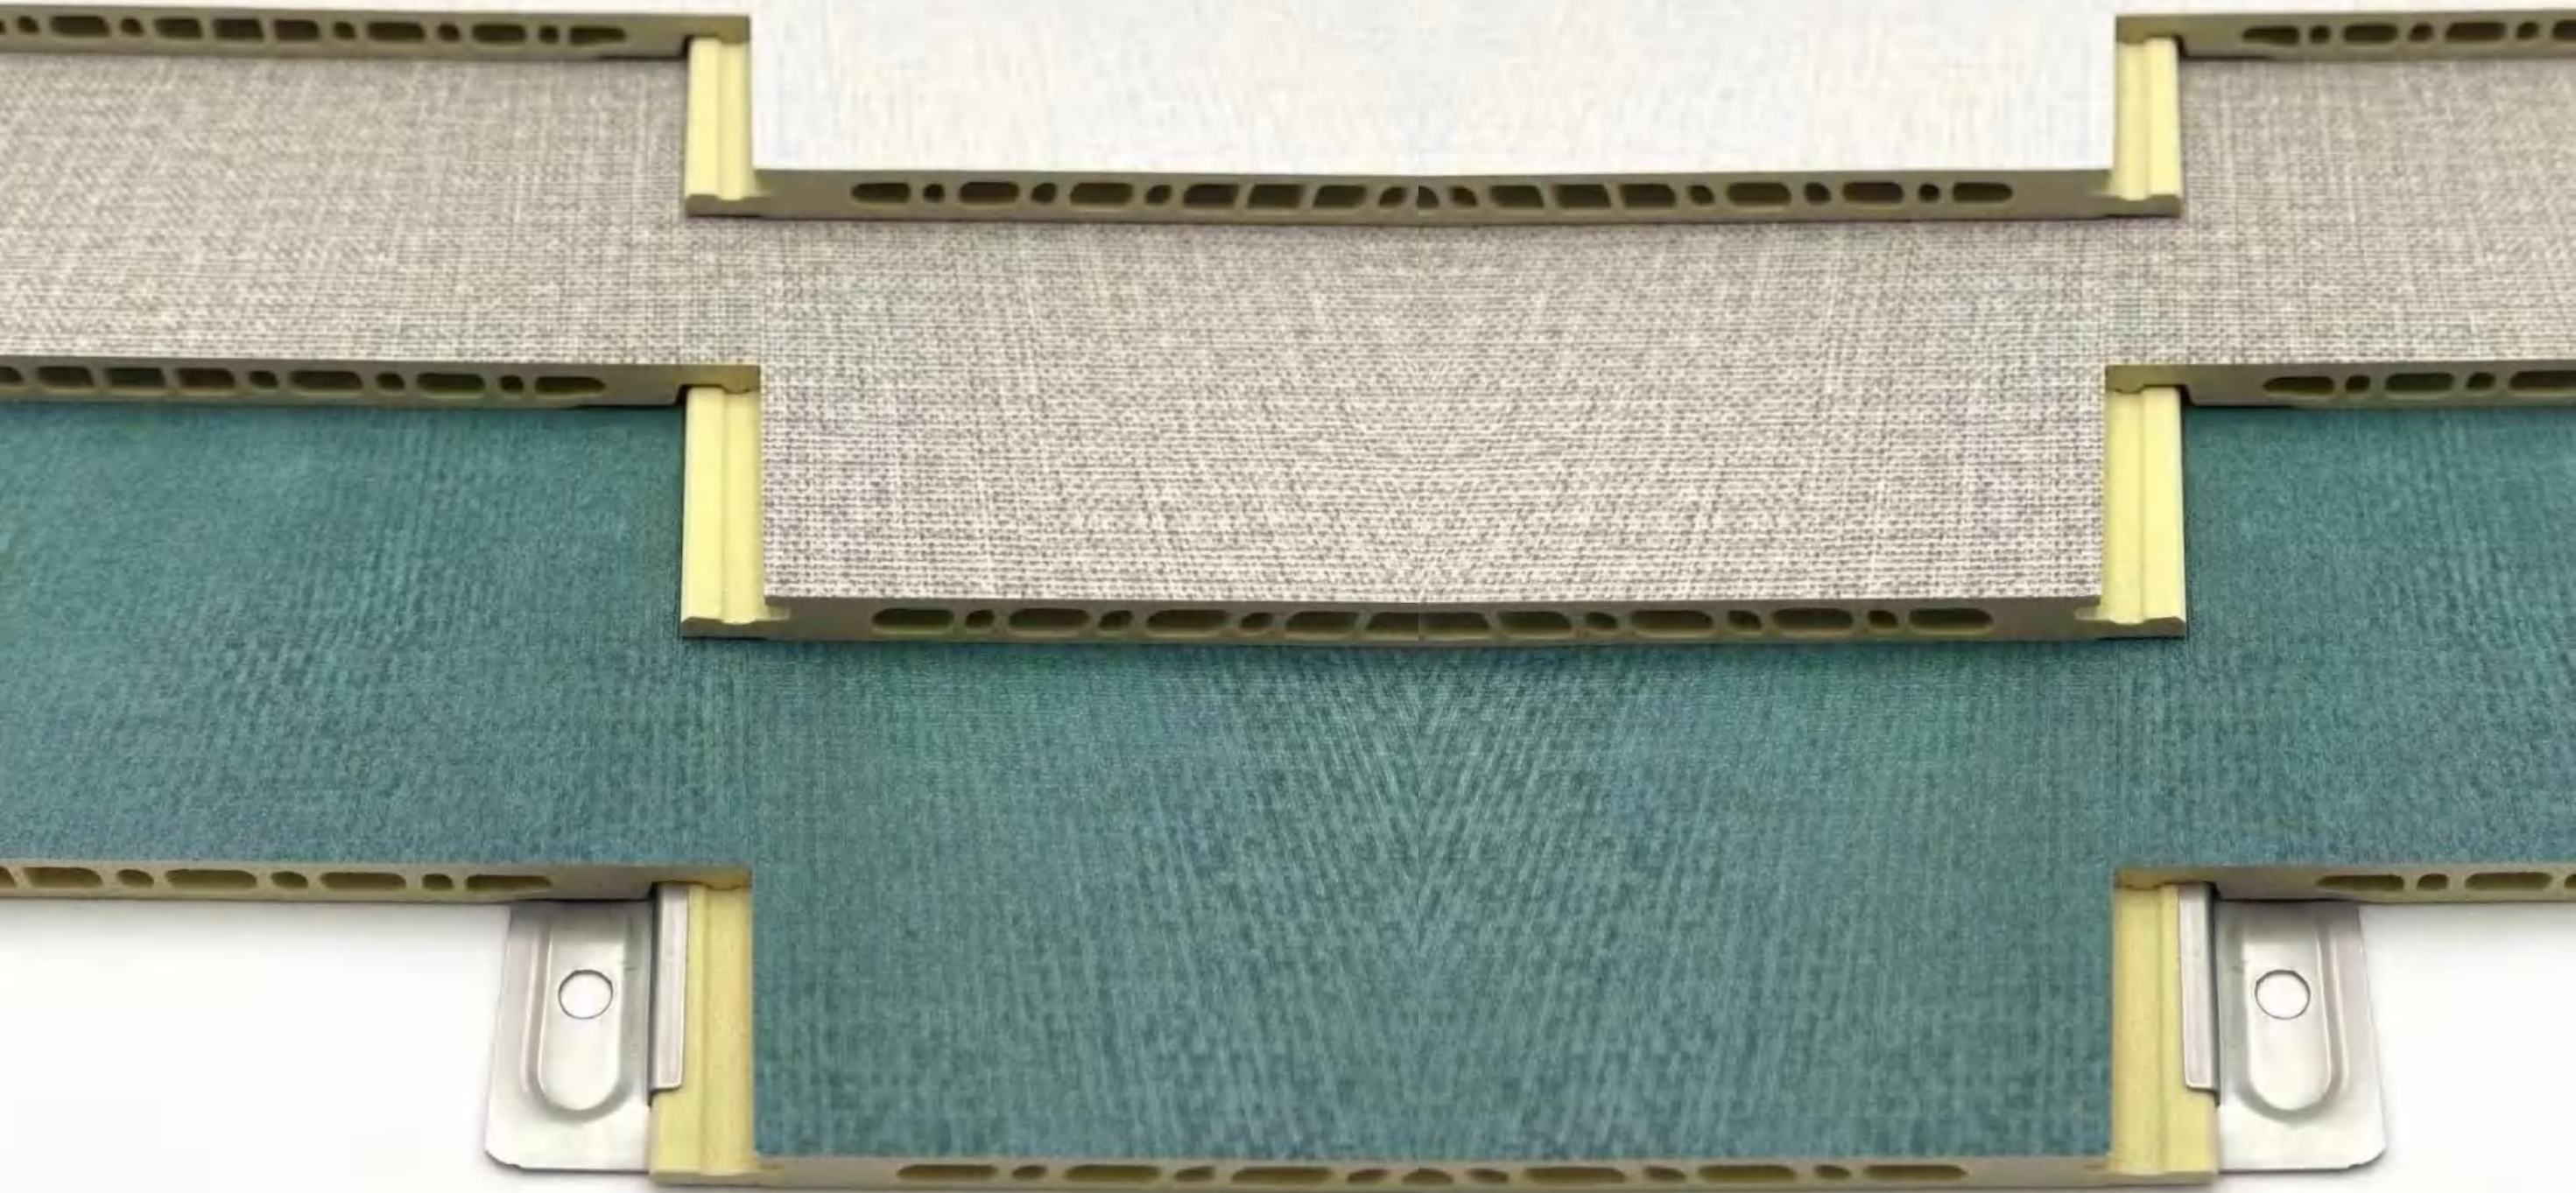


PVC wall panel technical data sheet



Description	Standard	Result
Total thickness/mm	T/CADB3-2018	9
Width /mm	T/CADB3-2018	450/600
Length /mm	T/CADB3-2018	2400/3600
Classification		
Fire rating	GB 8624-2012	B1
Formaldehyde emission/grade	T/CADB3-2018	E0
Performance		
Peel strength / (N/50mm)	T/CADB3-2018	40
Dimensional stability /%	T/CADB3-2018	≤0.75


配件

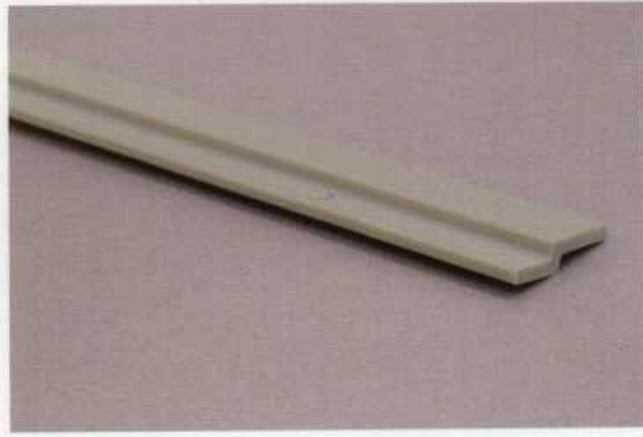


Z字卡扣




14卡扣

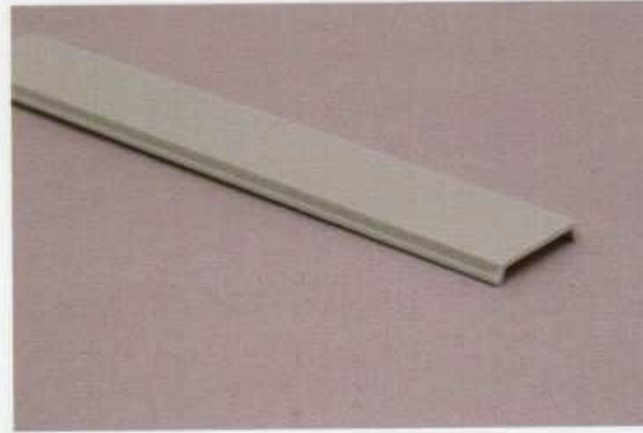

32卡扣

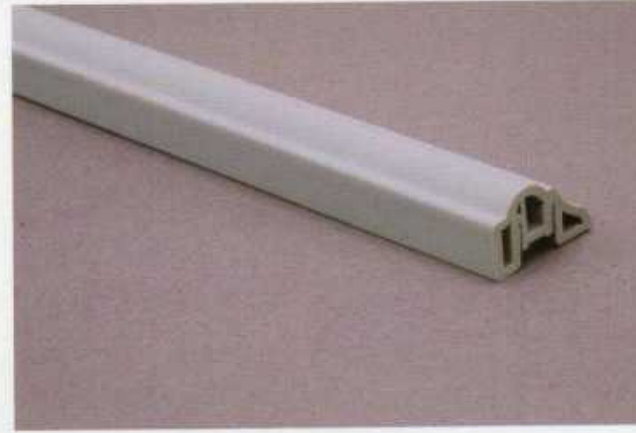


36饰线

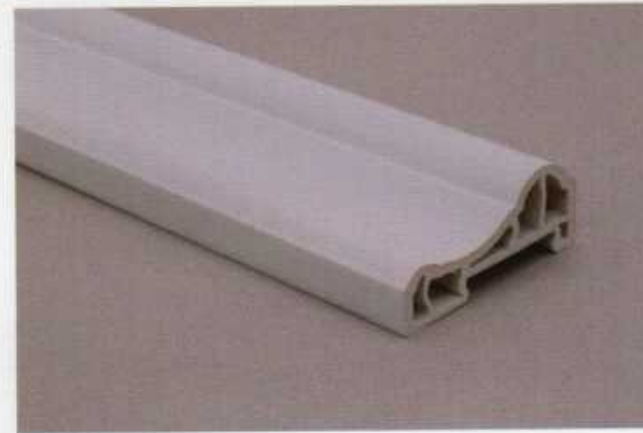

60饰线




60腰线

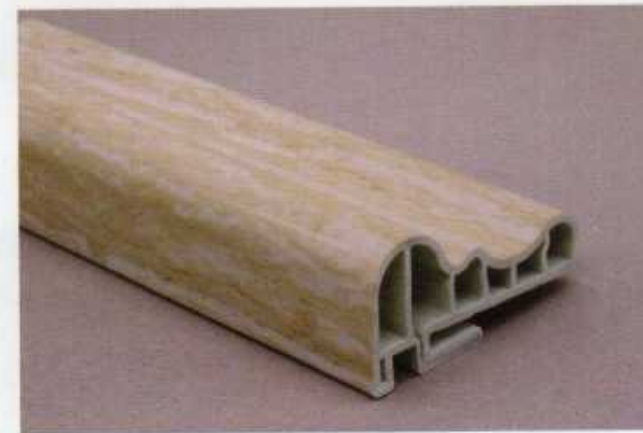


70墙裙线



75地脚线

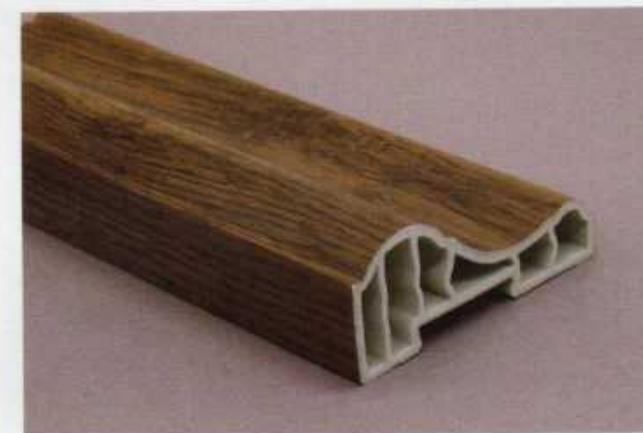

80饰线

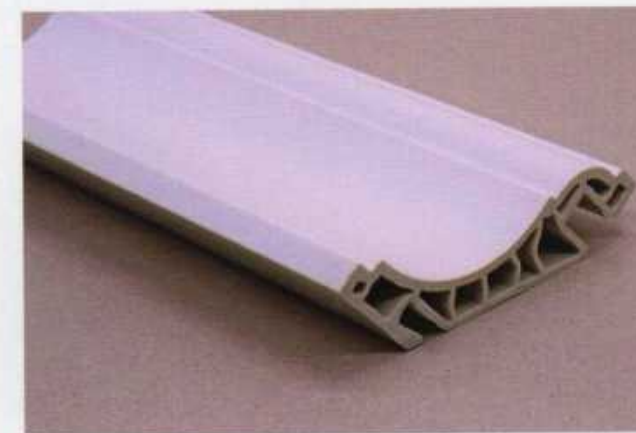

100顶线





100地脚线


安装方法

相对平整墙面


1. 清理墙面
2. 将第一块墙板凸边缘切掉，凹槽垂直处墙板底边插入不锈钢扣件，然后用螺钉固定。再将第二块墙板的凸榫插入第一块墙板的凹槽内，以此类推，安装完成整个墙面。

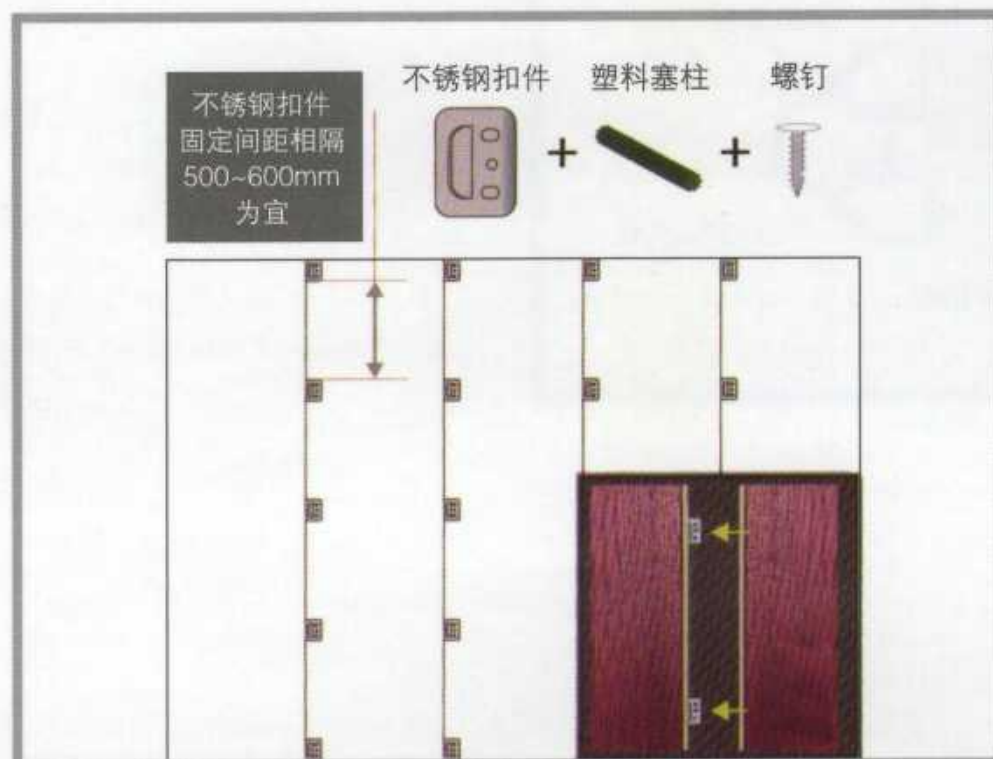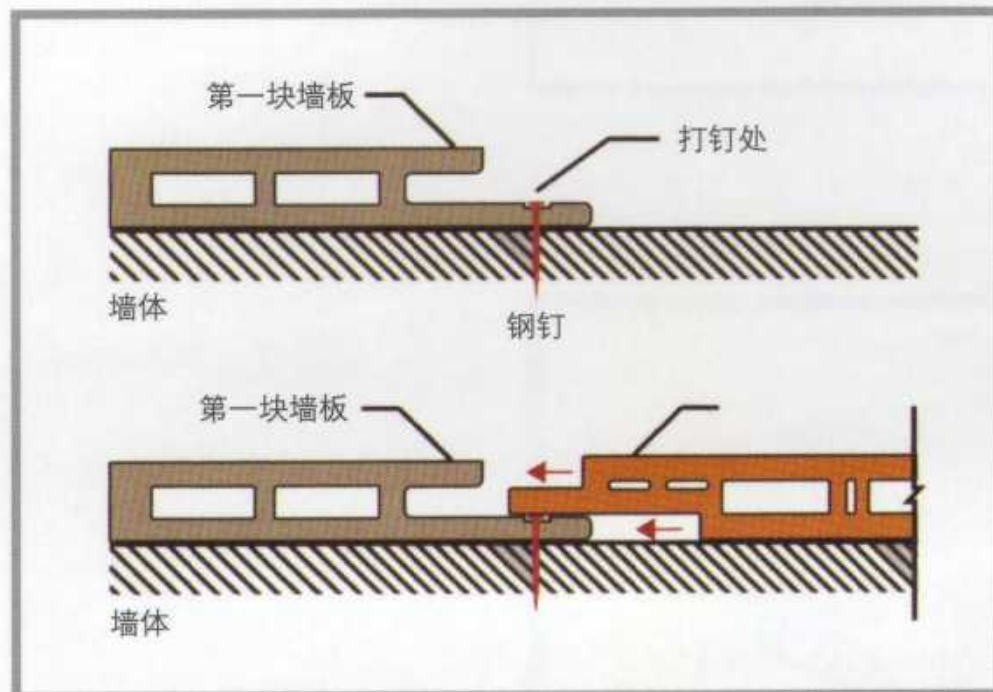


3. 墙角处需配阴角包边、阳角包边处理，或用开槽机拆成相应角度。

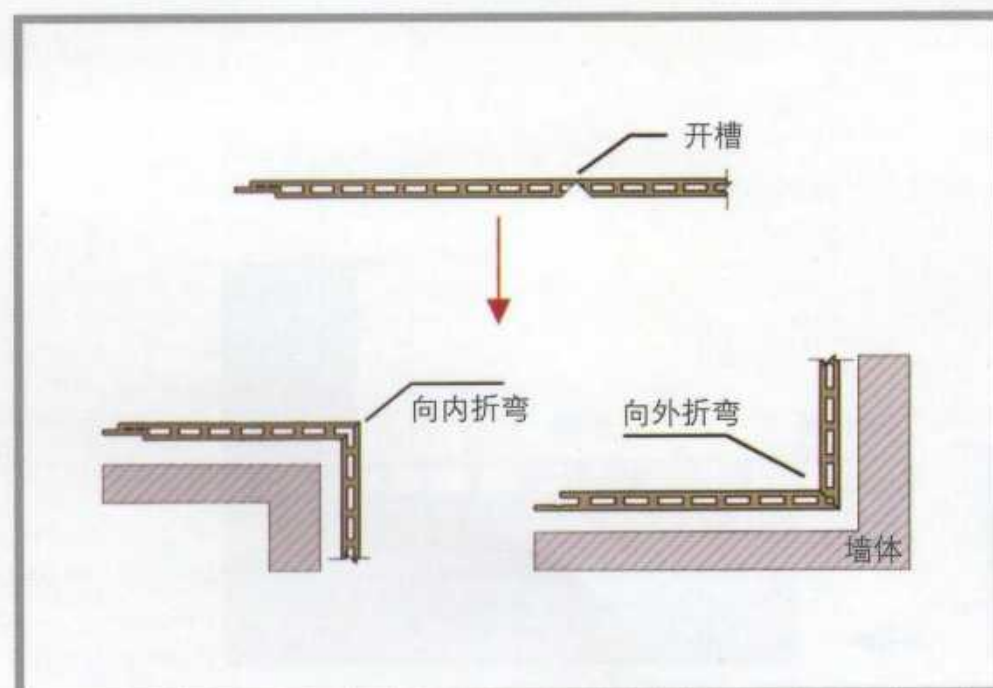

平整度比较差的墙面，需要轻钢龙骨或木龙骨找平安装

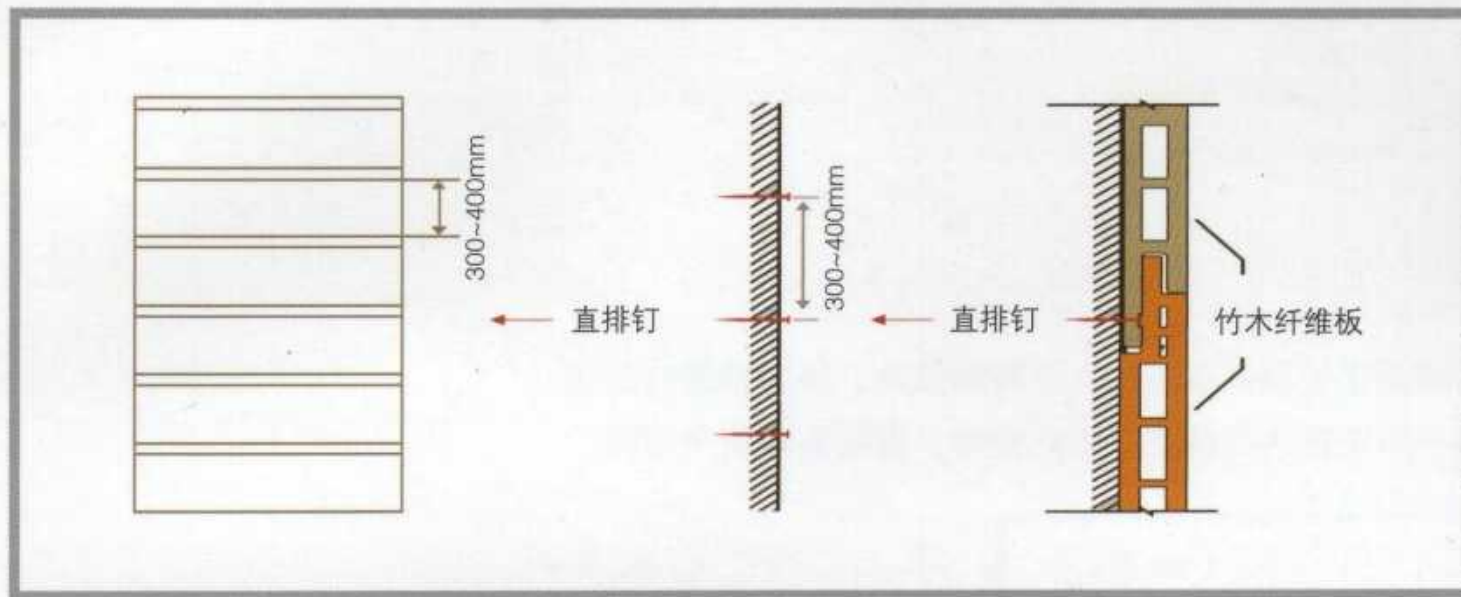


顶线及特殊线条安装说明

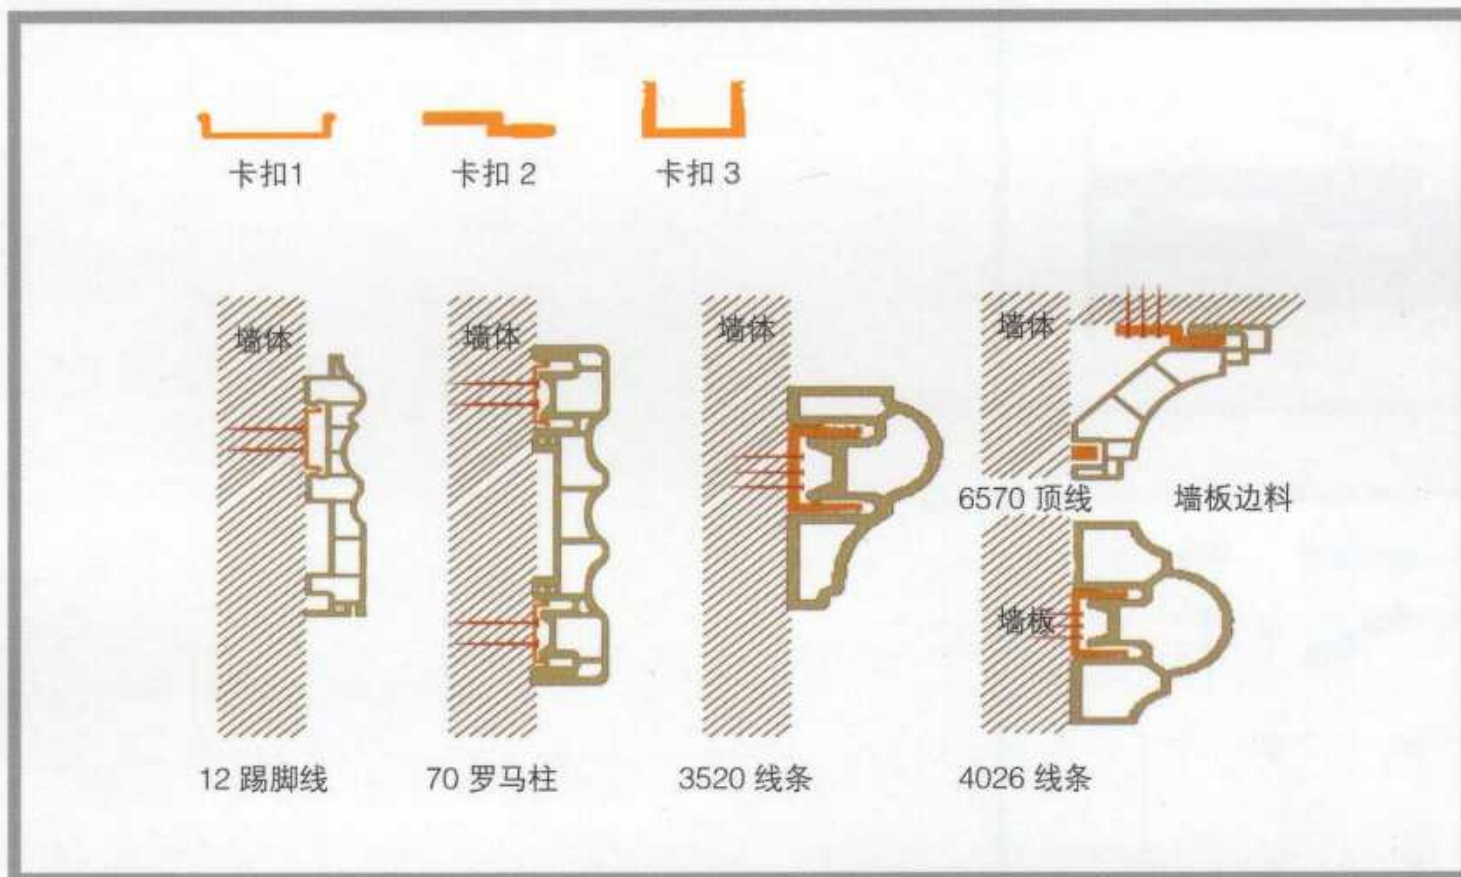

窗台板安装

1. 窗台板可以根据窗台的宽度任意切割，公司现有产品见“配件”。
2. 将卡扣对应窗台板下方的卡槽位置用钉子固定（如下图所示）

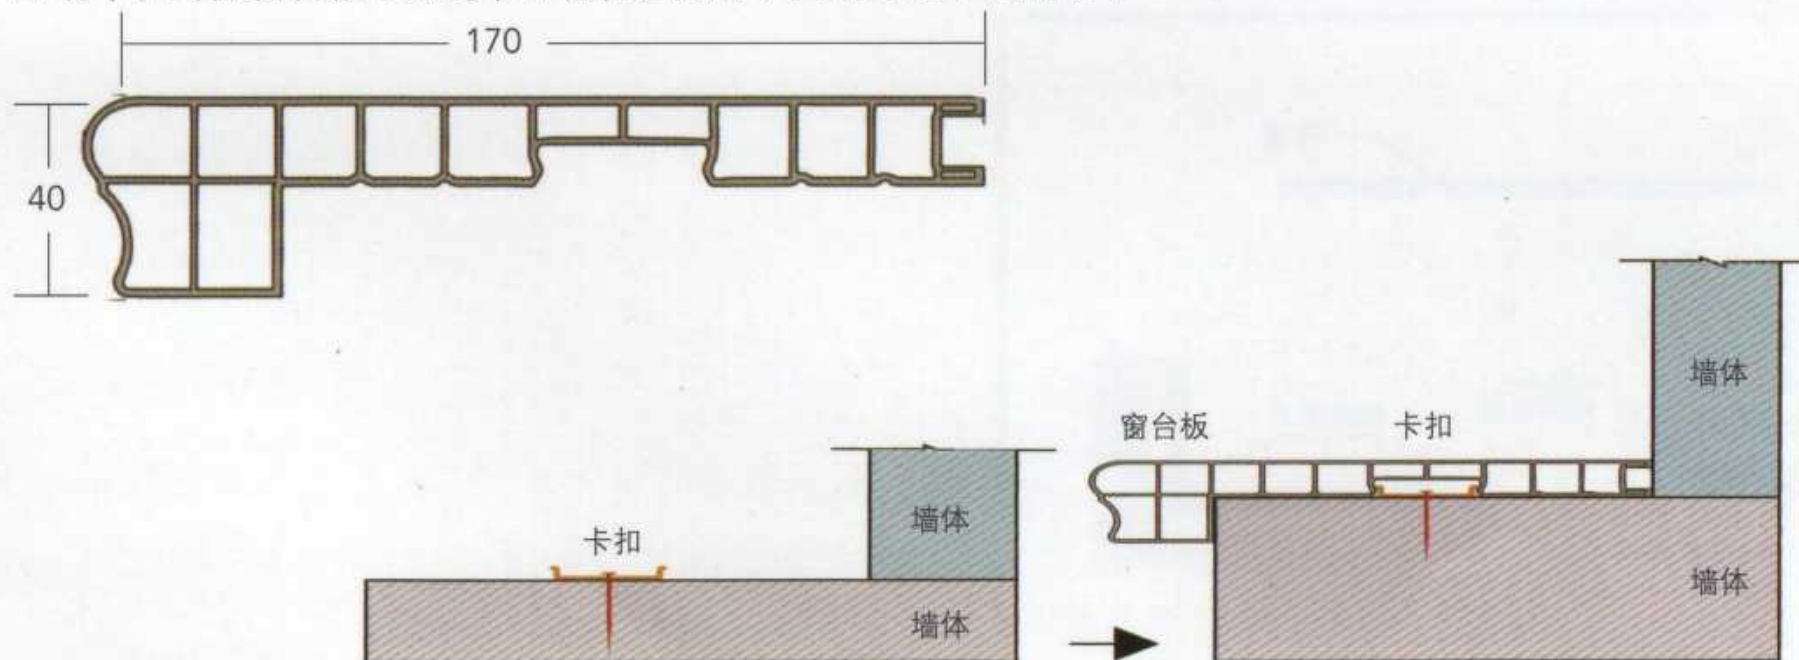

SJ2-A101

SJ2-A102


SJ2-A103

SJ2-A104

SJ2-A105

SJ2-AJ01

SJ2-AJ02

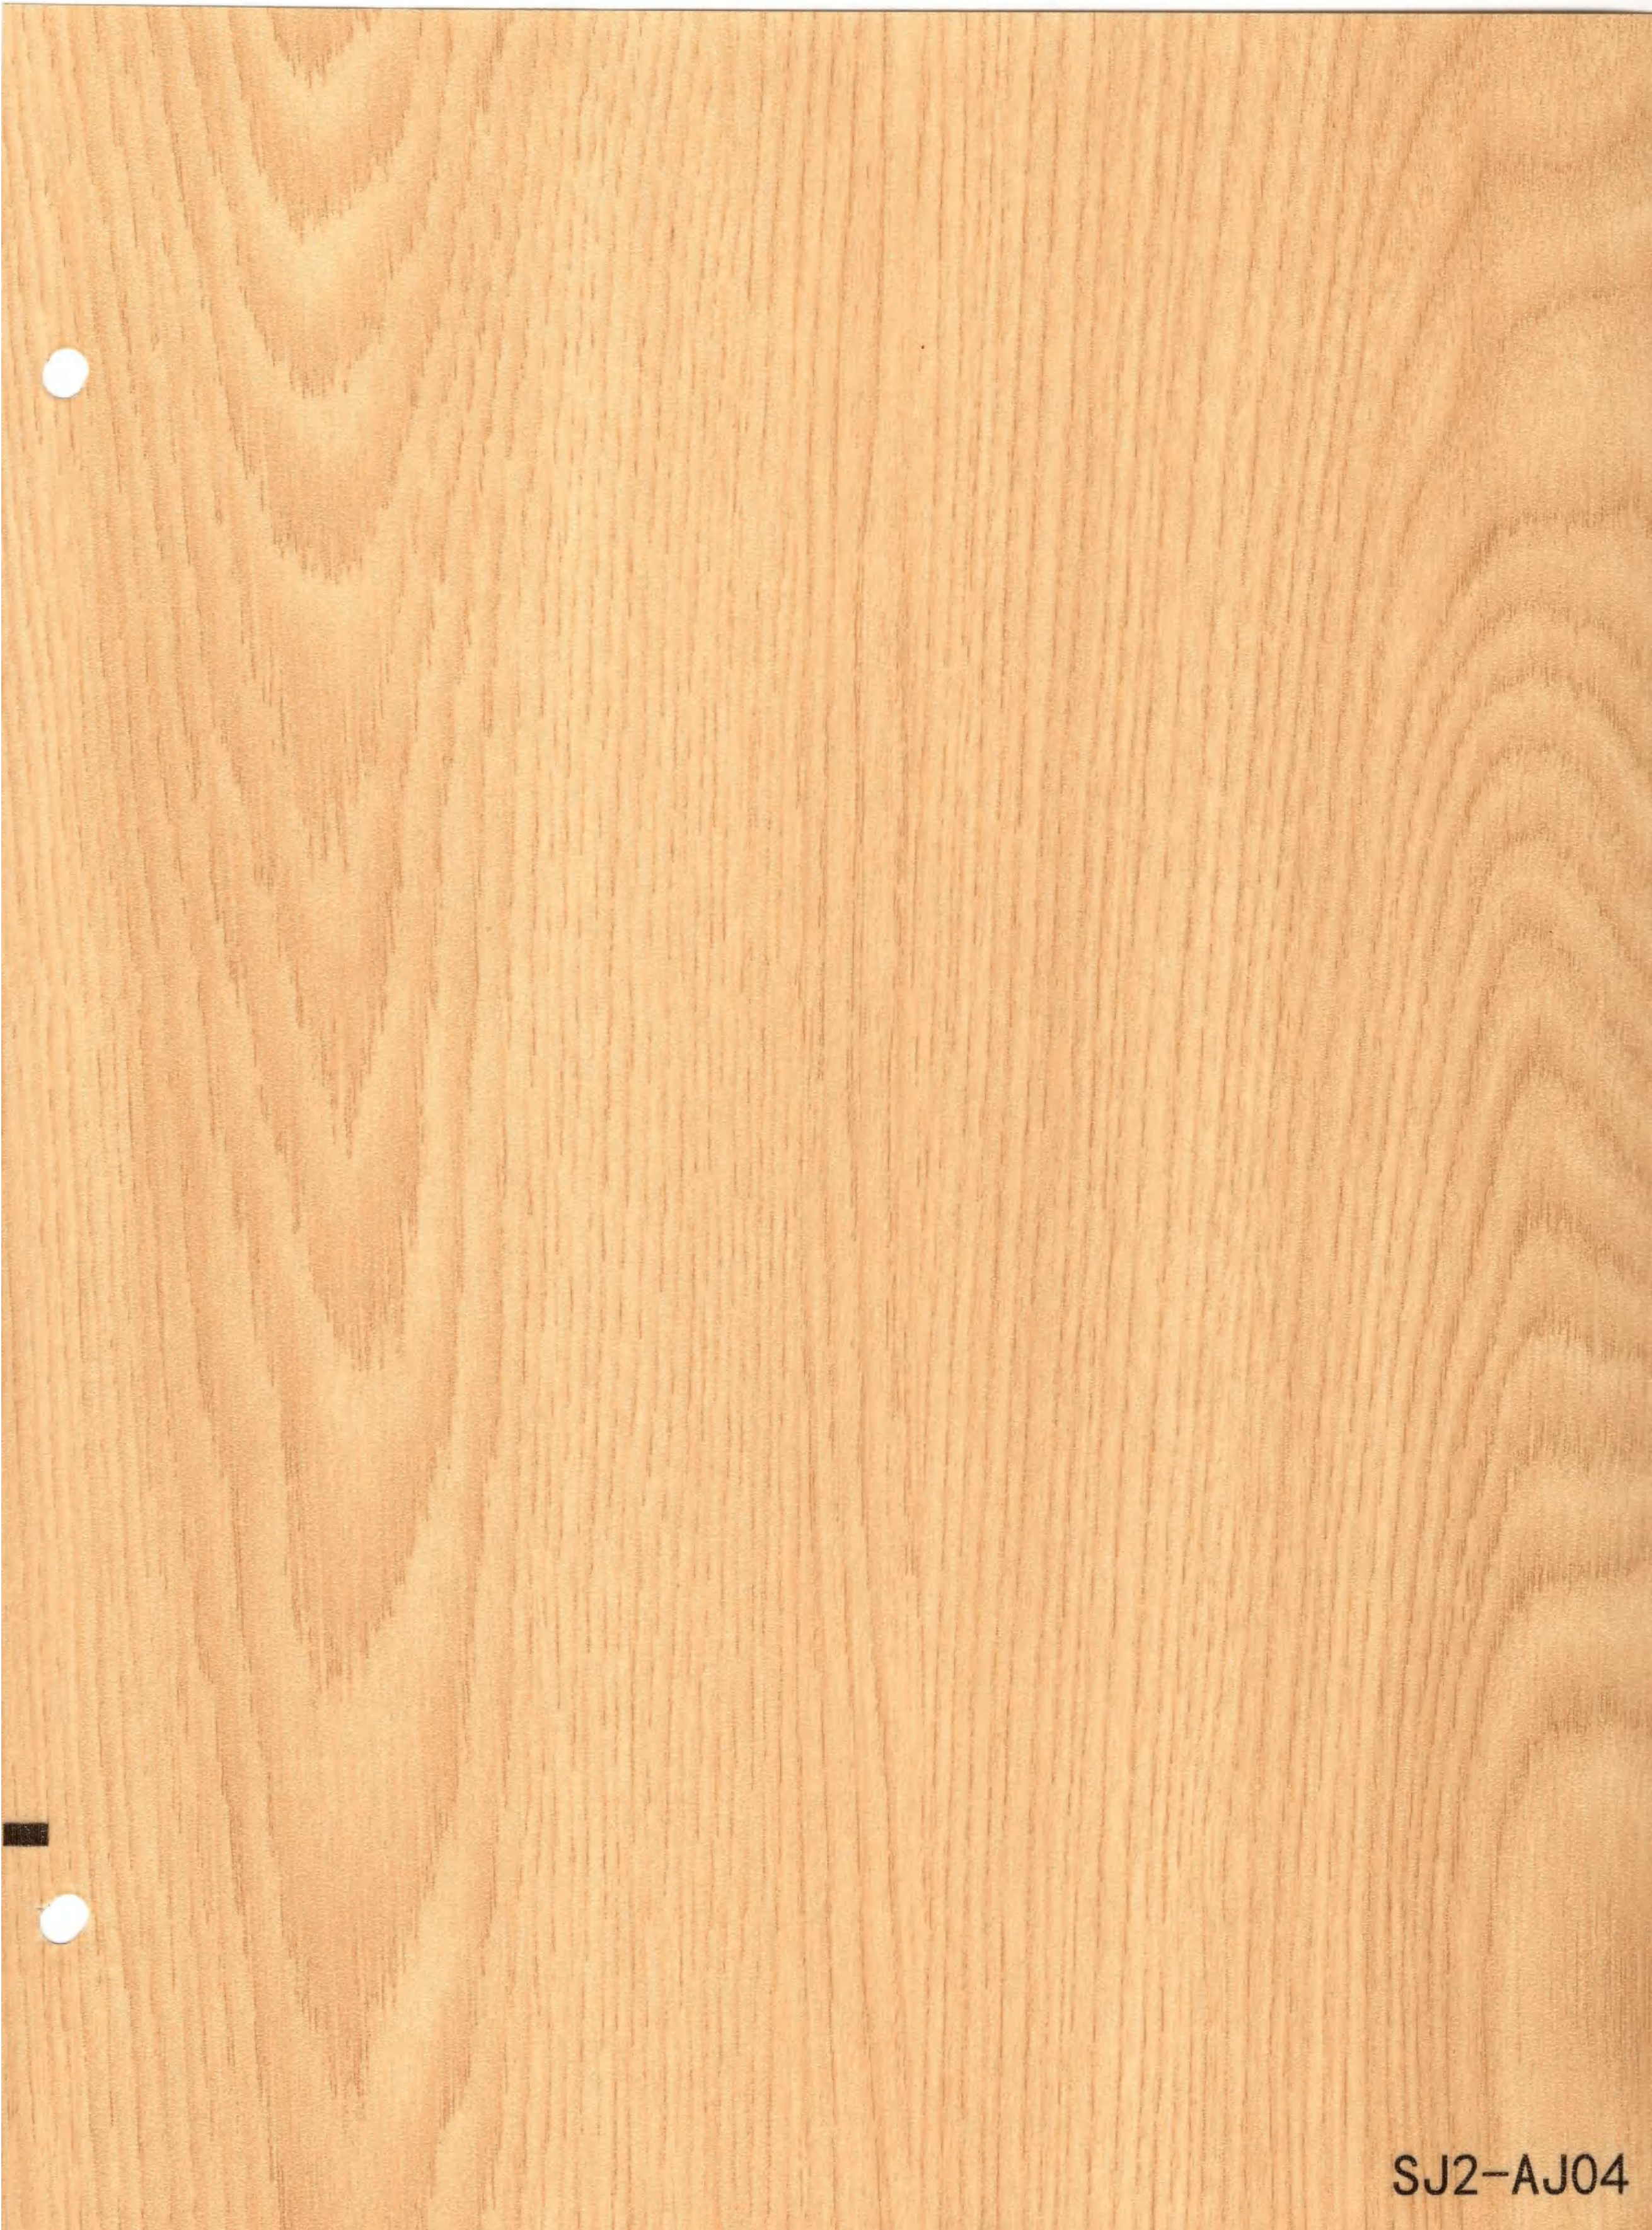

SJ2-AJ04

SJ2-B05

SJ2-B10

SJ2-B11

SJ2-C03



SJ2-C04



SJ2-C05

SJ2-C10

SJ2-C11

SJ2-C12

SJ2-C13

SJ2-D02

SJ2-E04




SJ2-E05



SJ2-F04


SJ2-G02

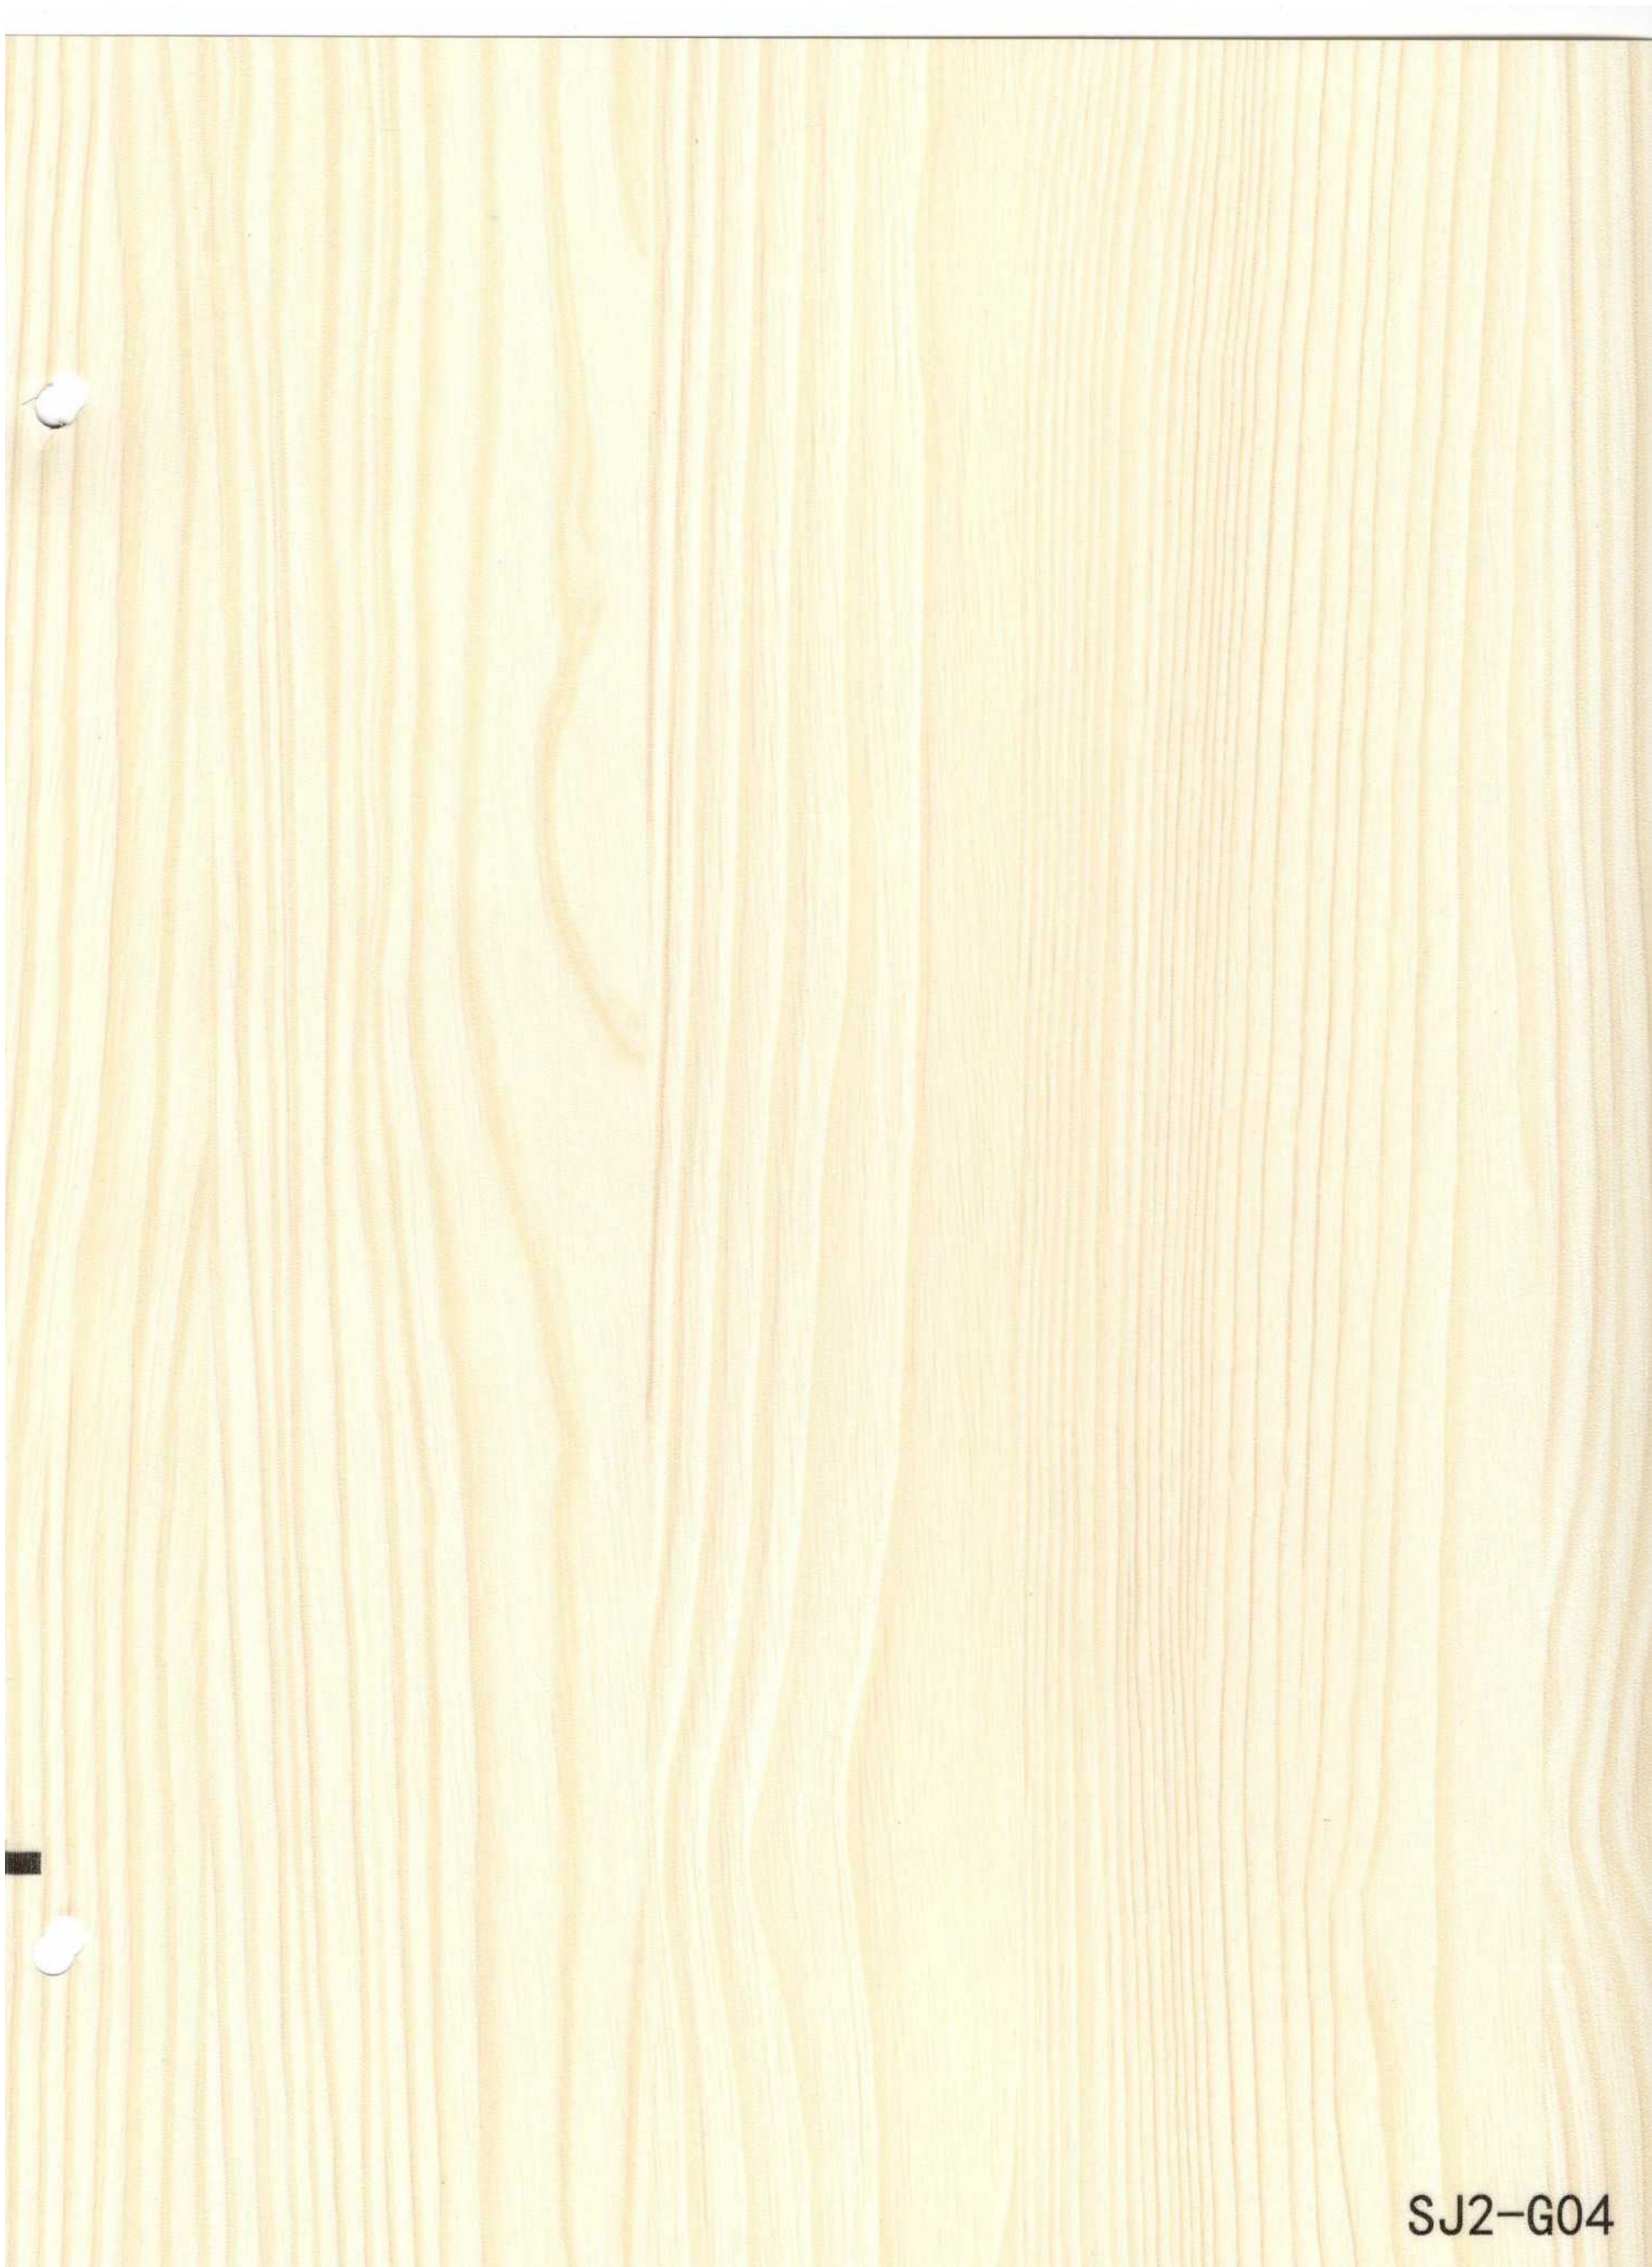

SJ2-G04

SJ2-S01

SJ2-J10

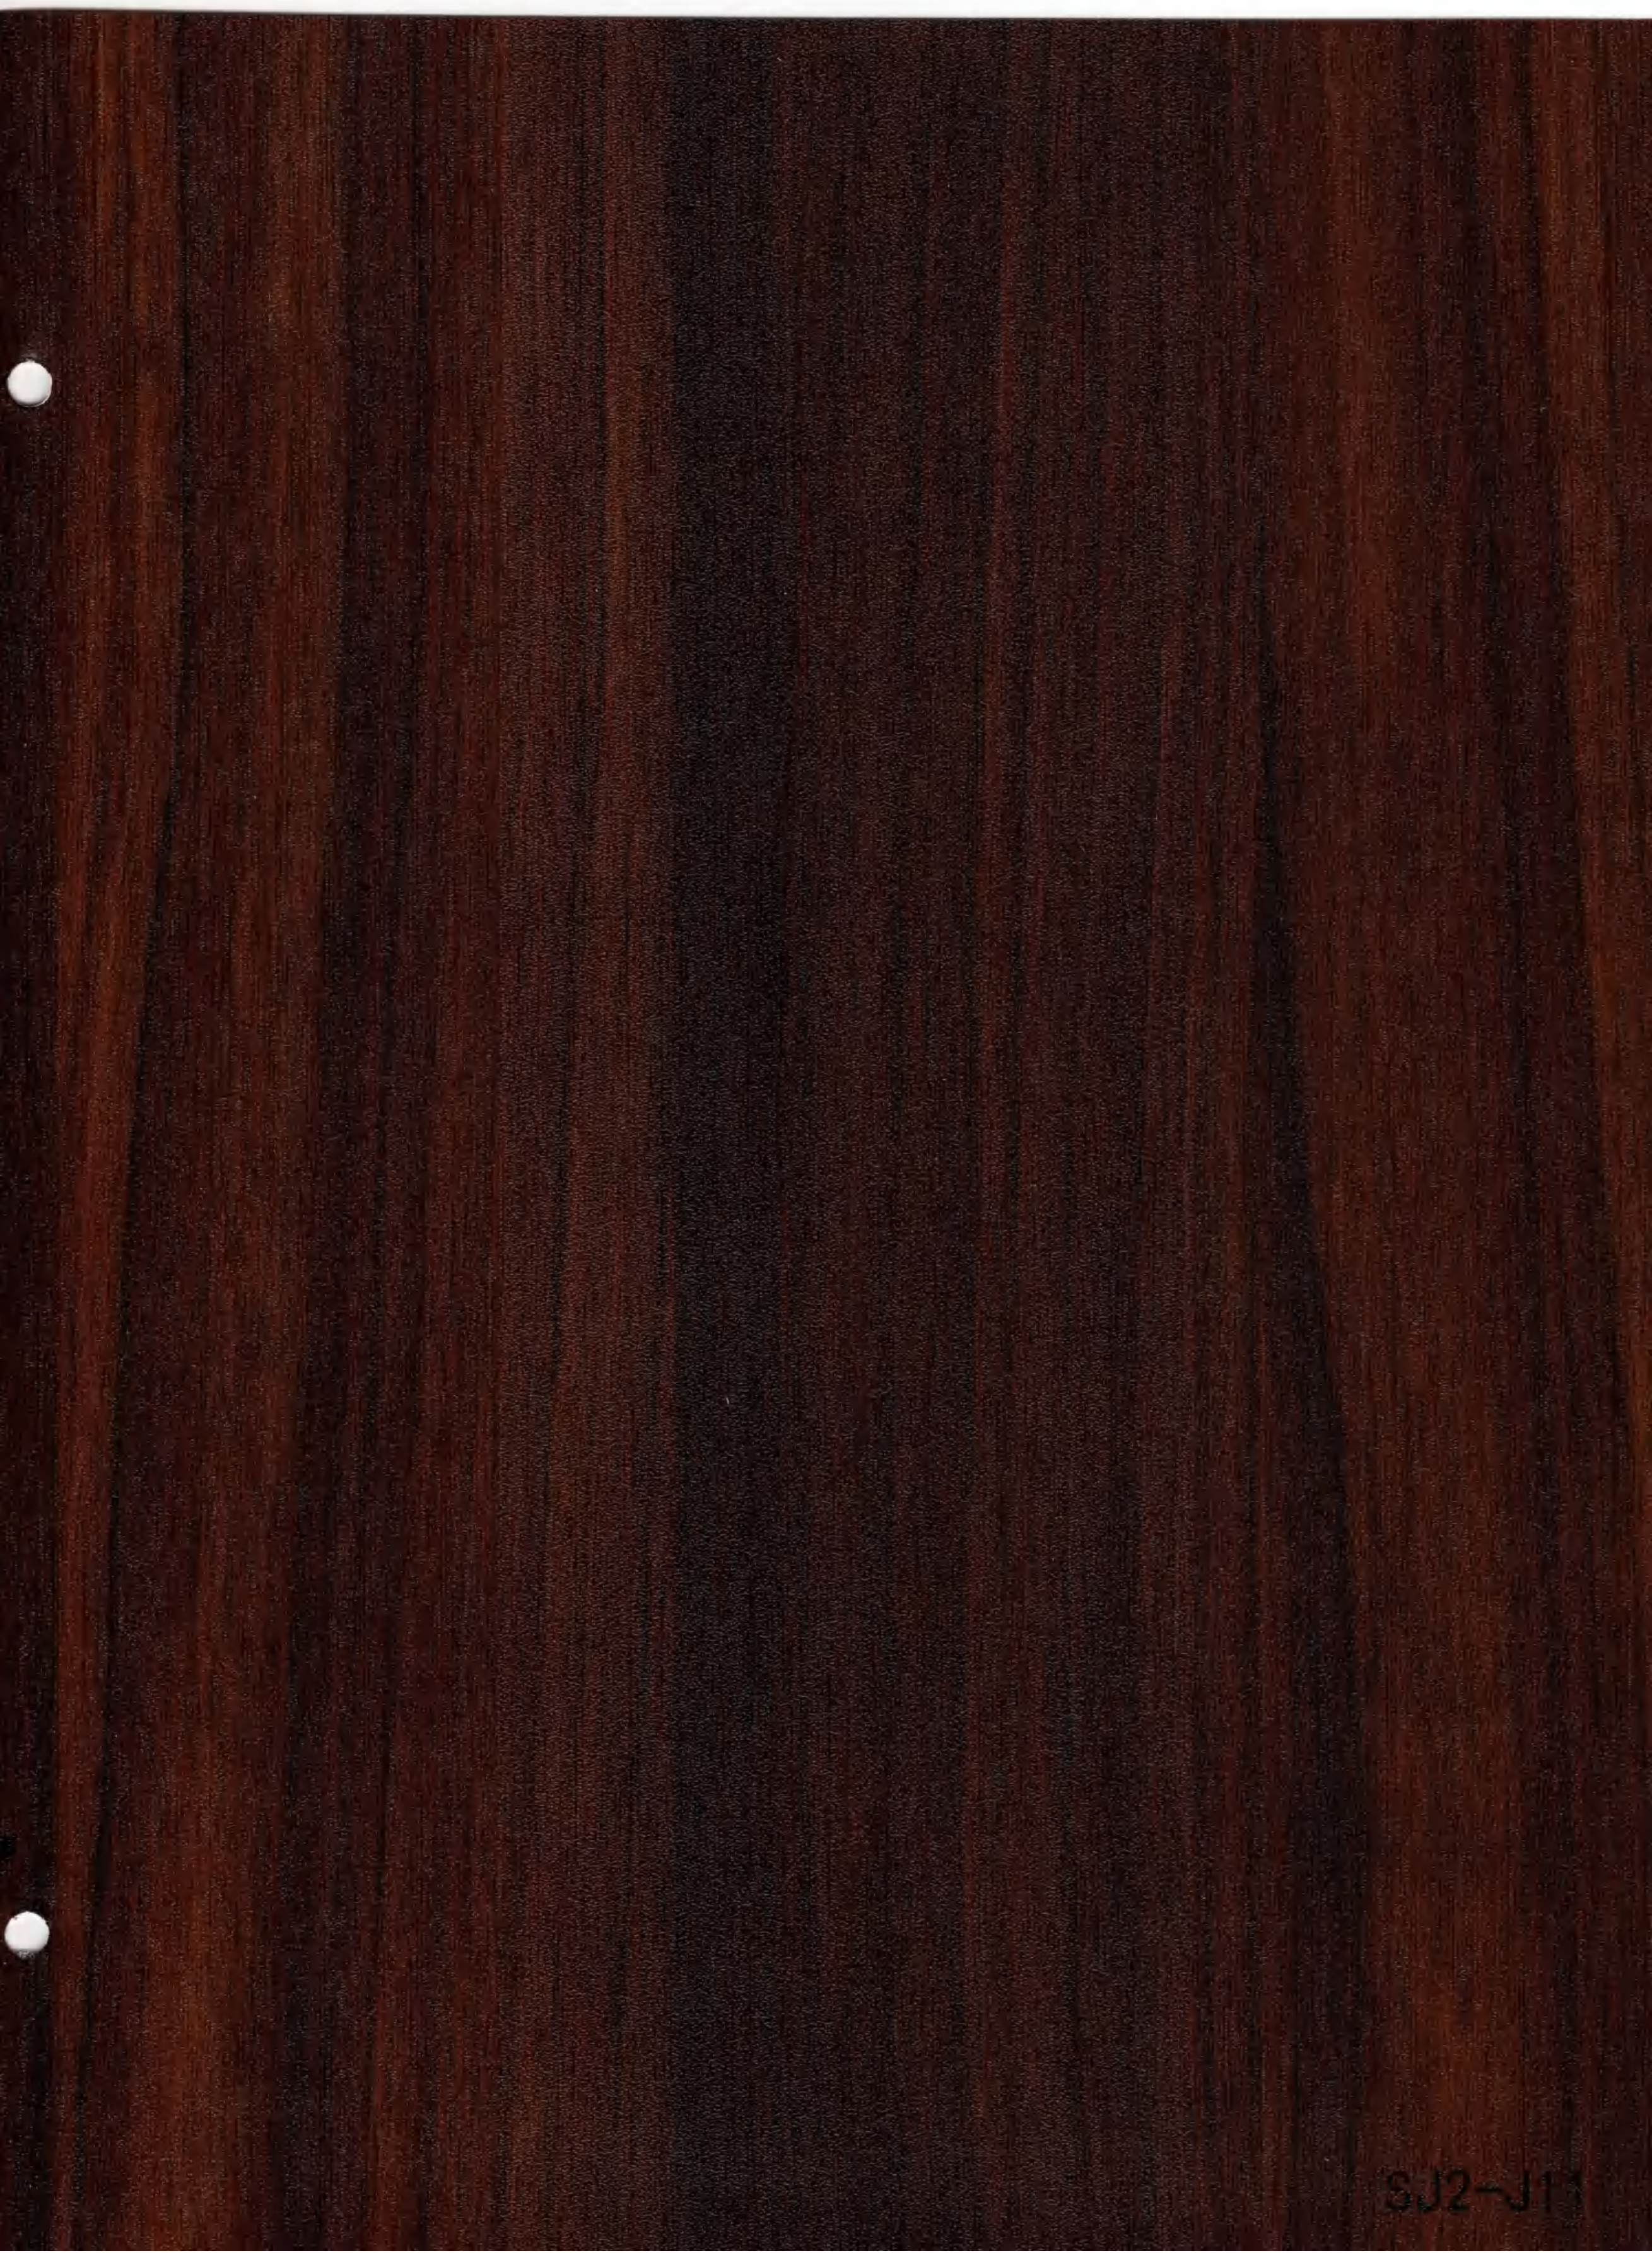

SJ2-J11

SJ2-K01

SJ3-H01


SJ3-H02

SJ3-H03


SJ3-H04

SJ3-H05


SJ3-H06

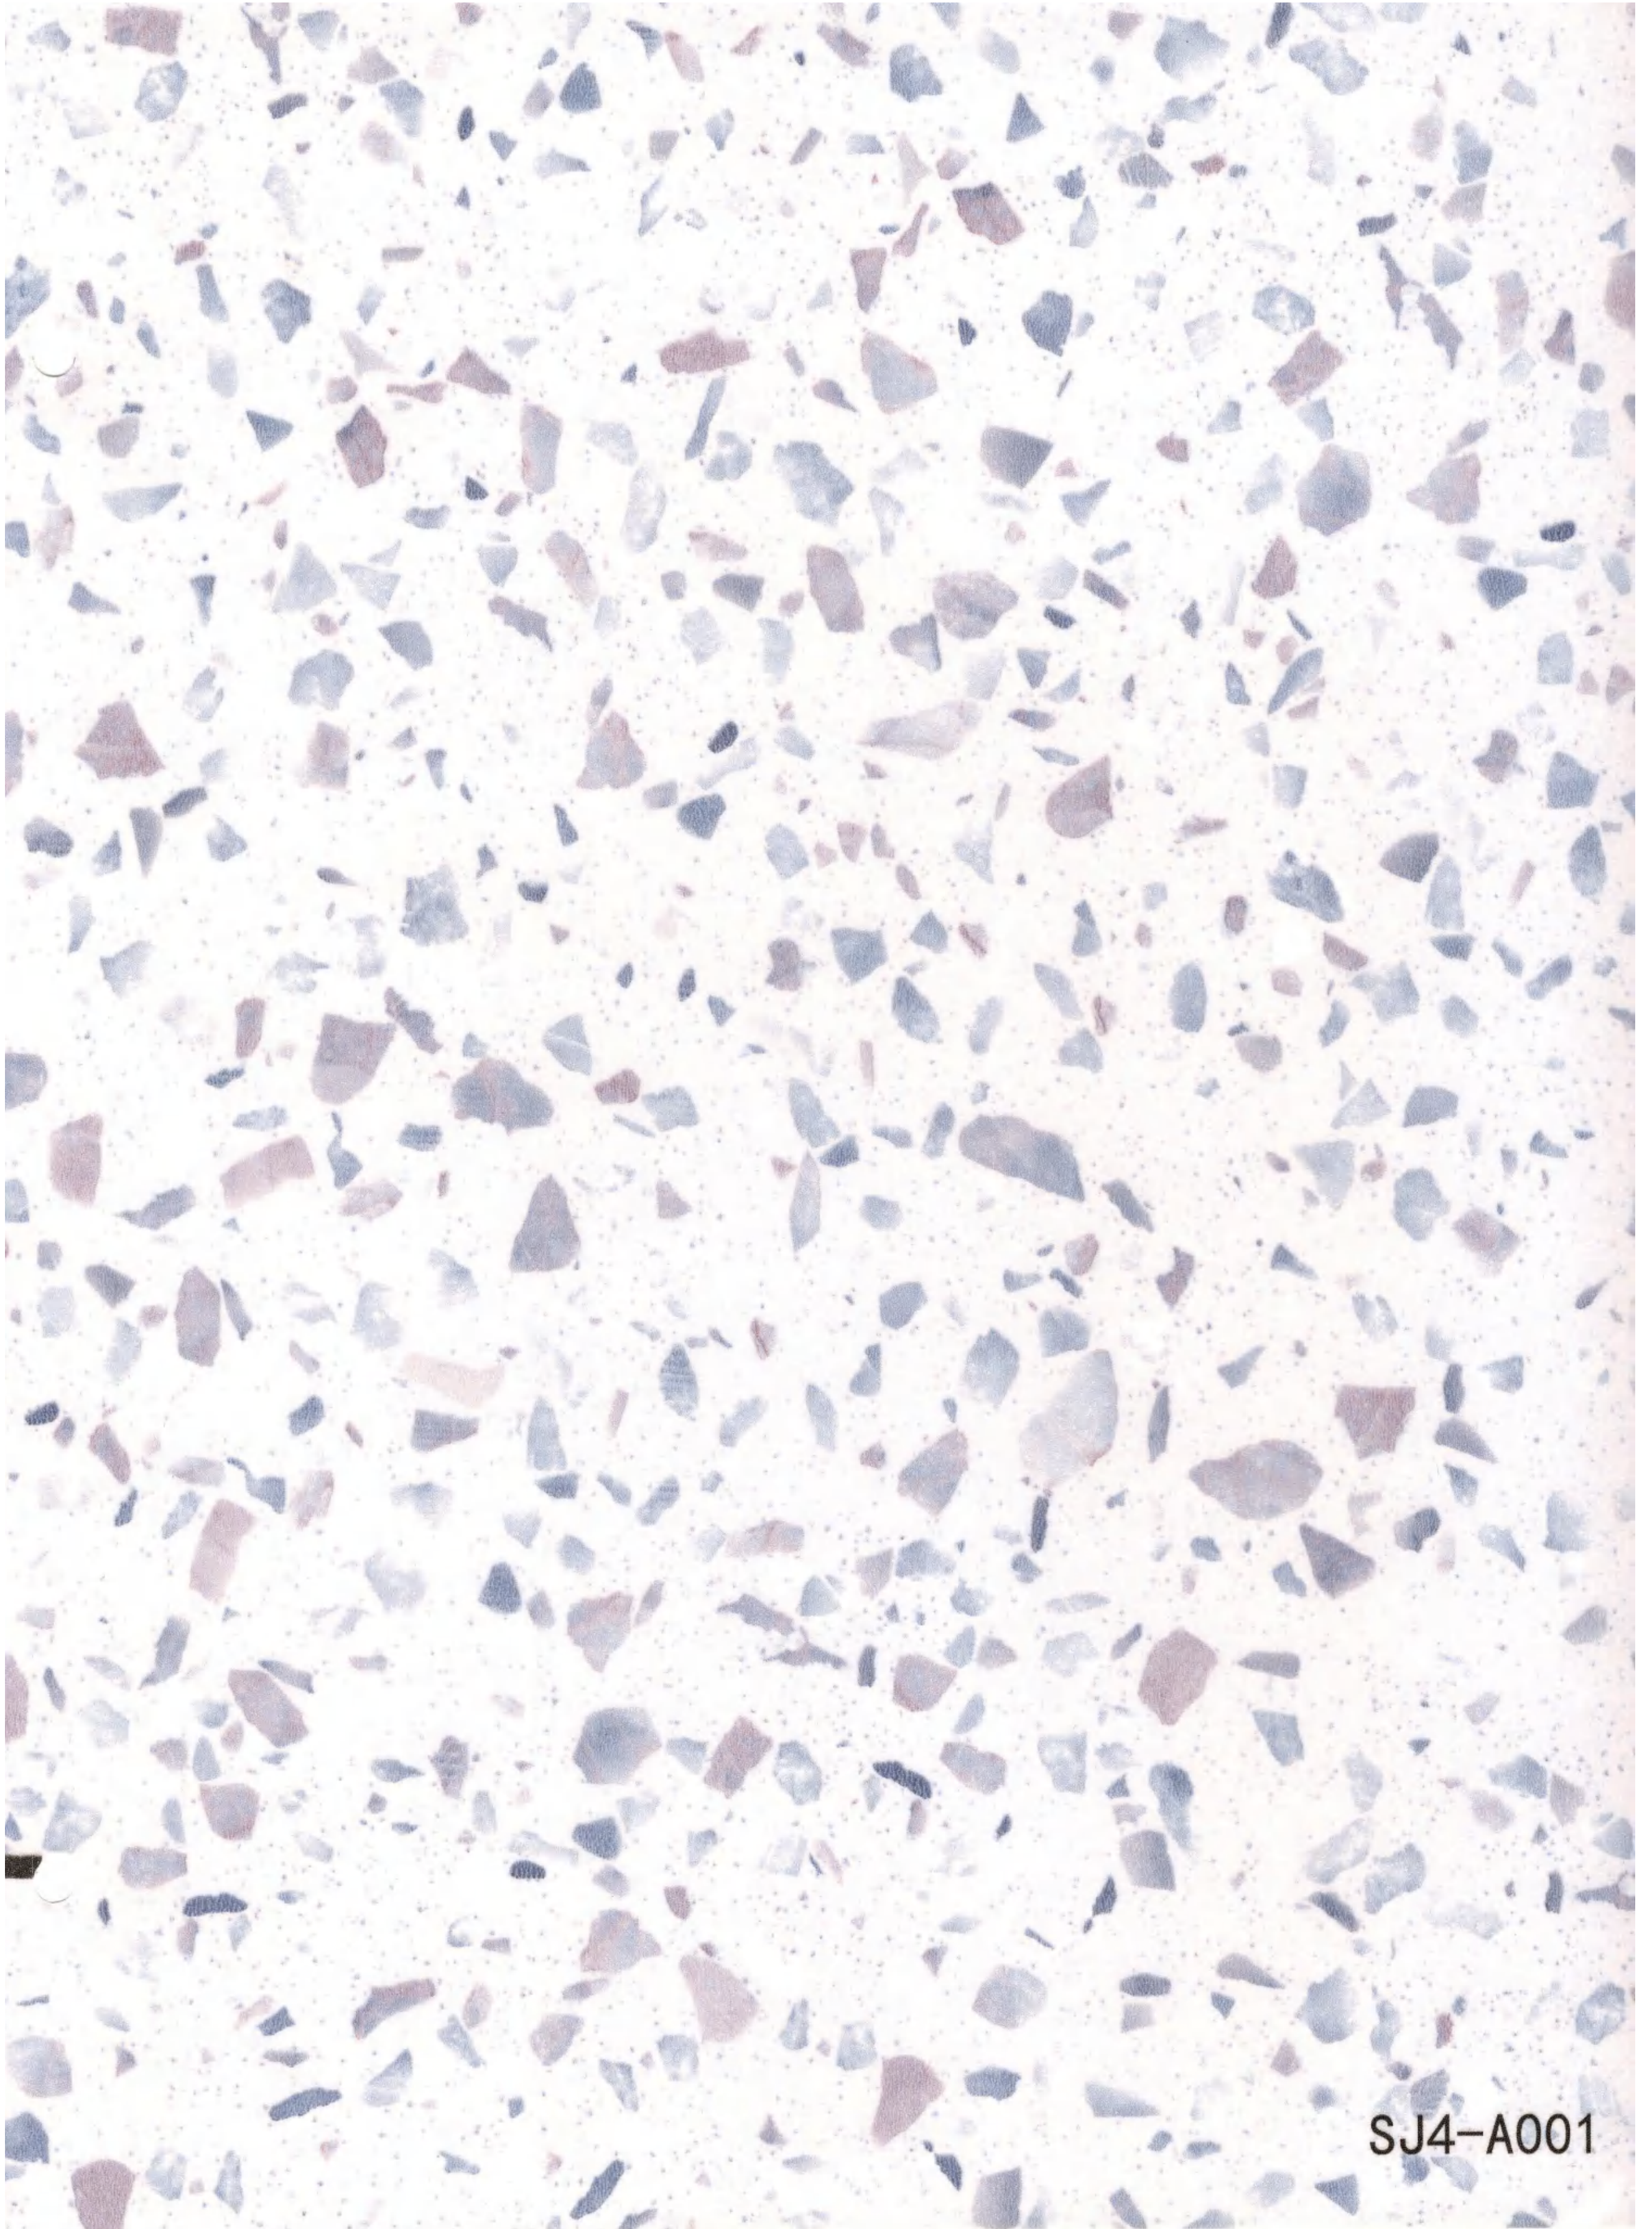


SJ4-A001

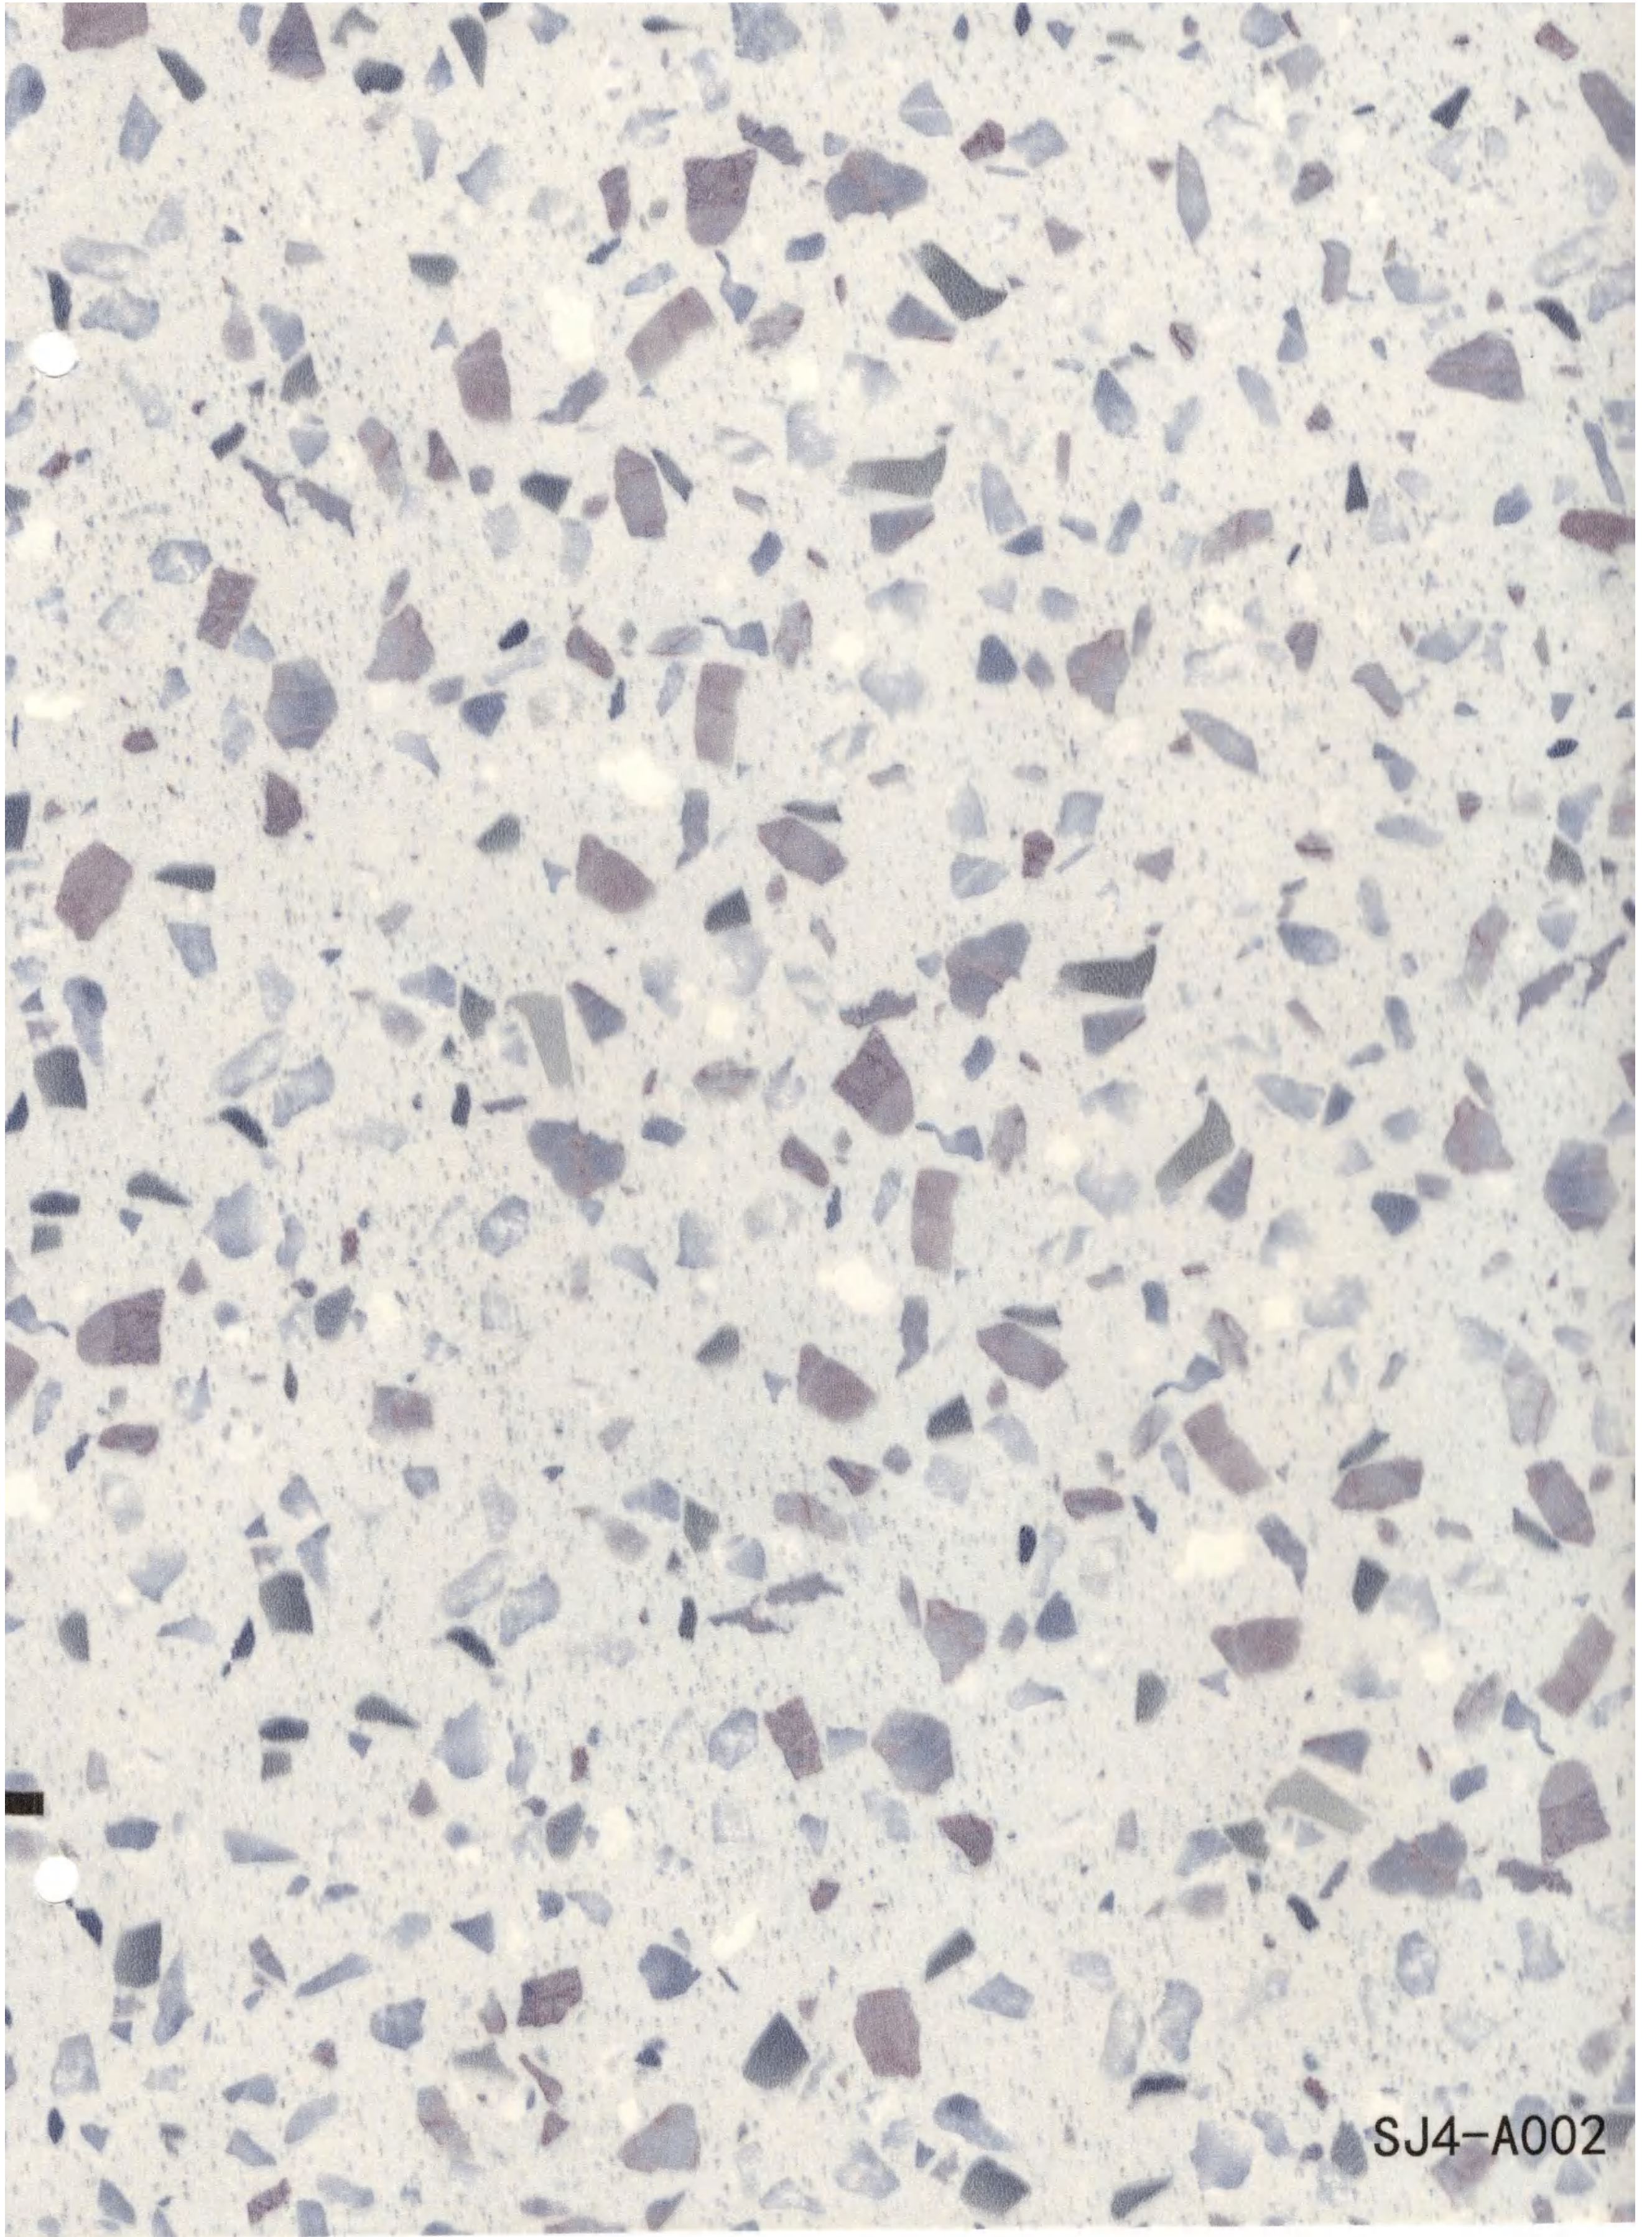

SJ4-A002

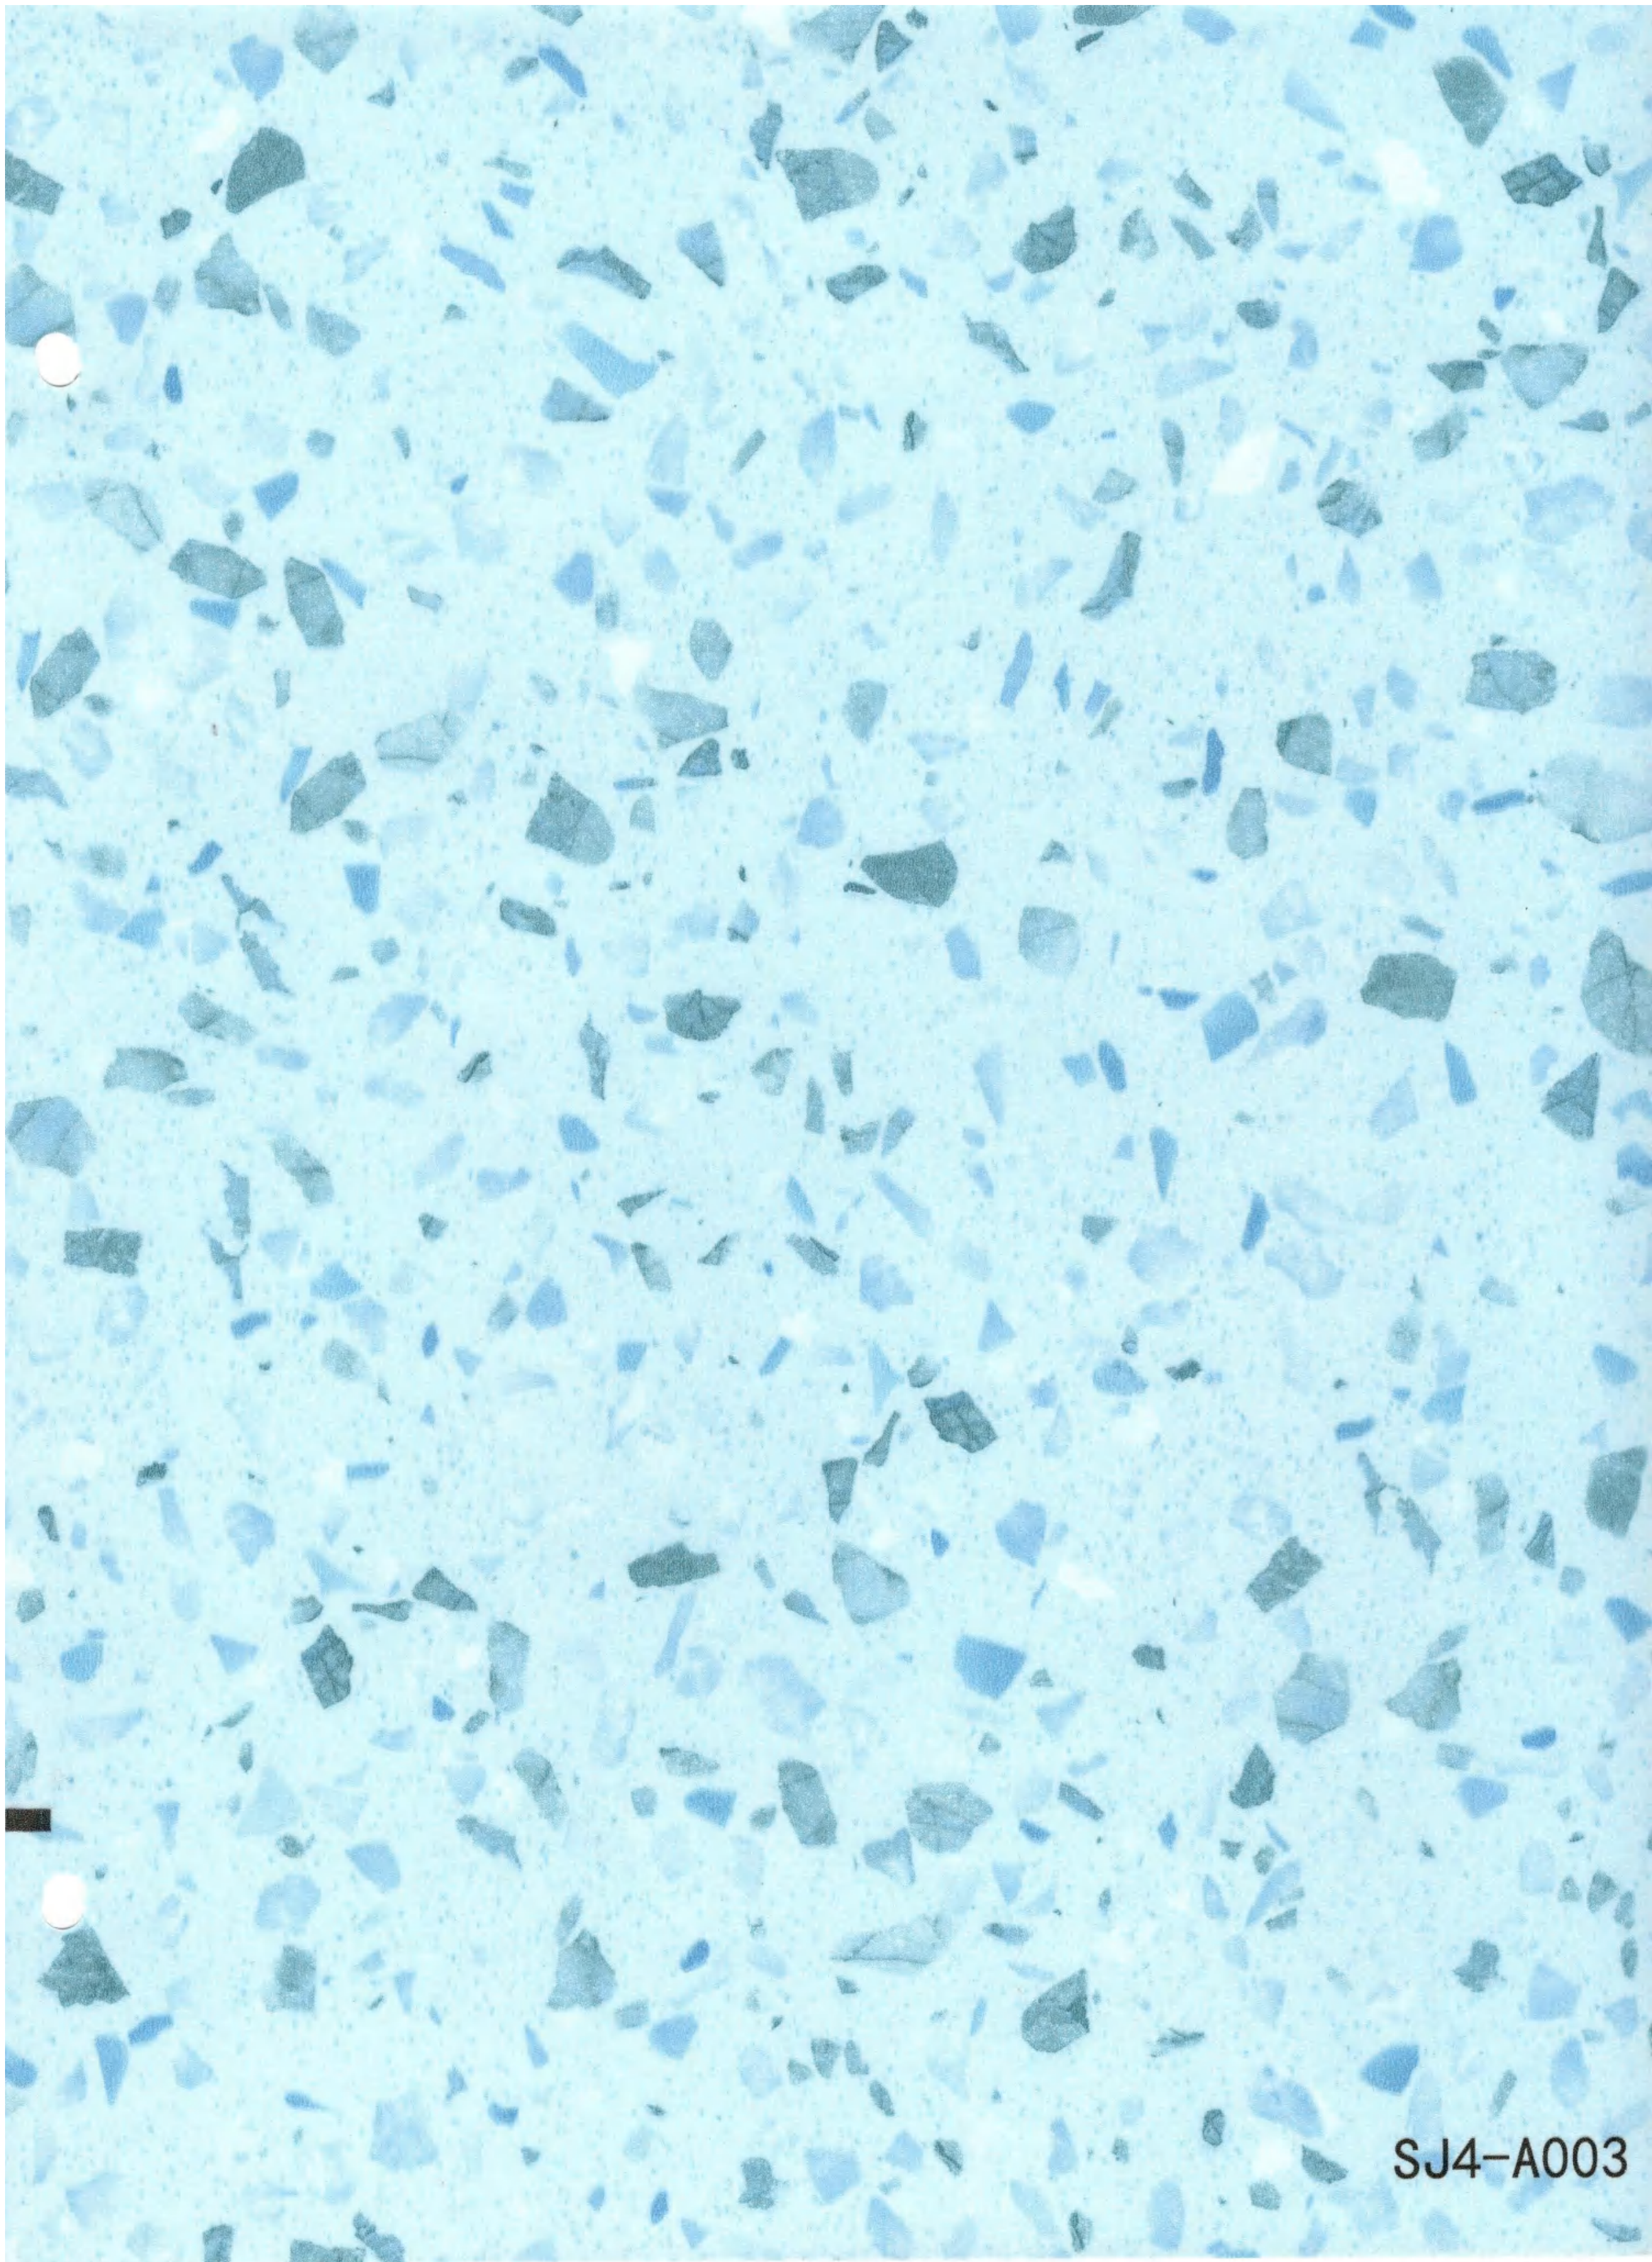


SJ4-A003

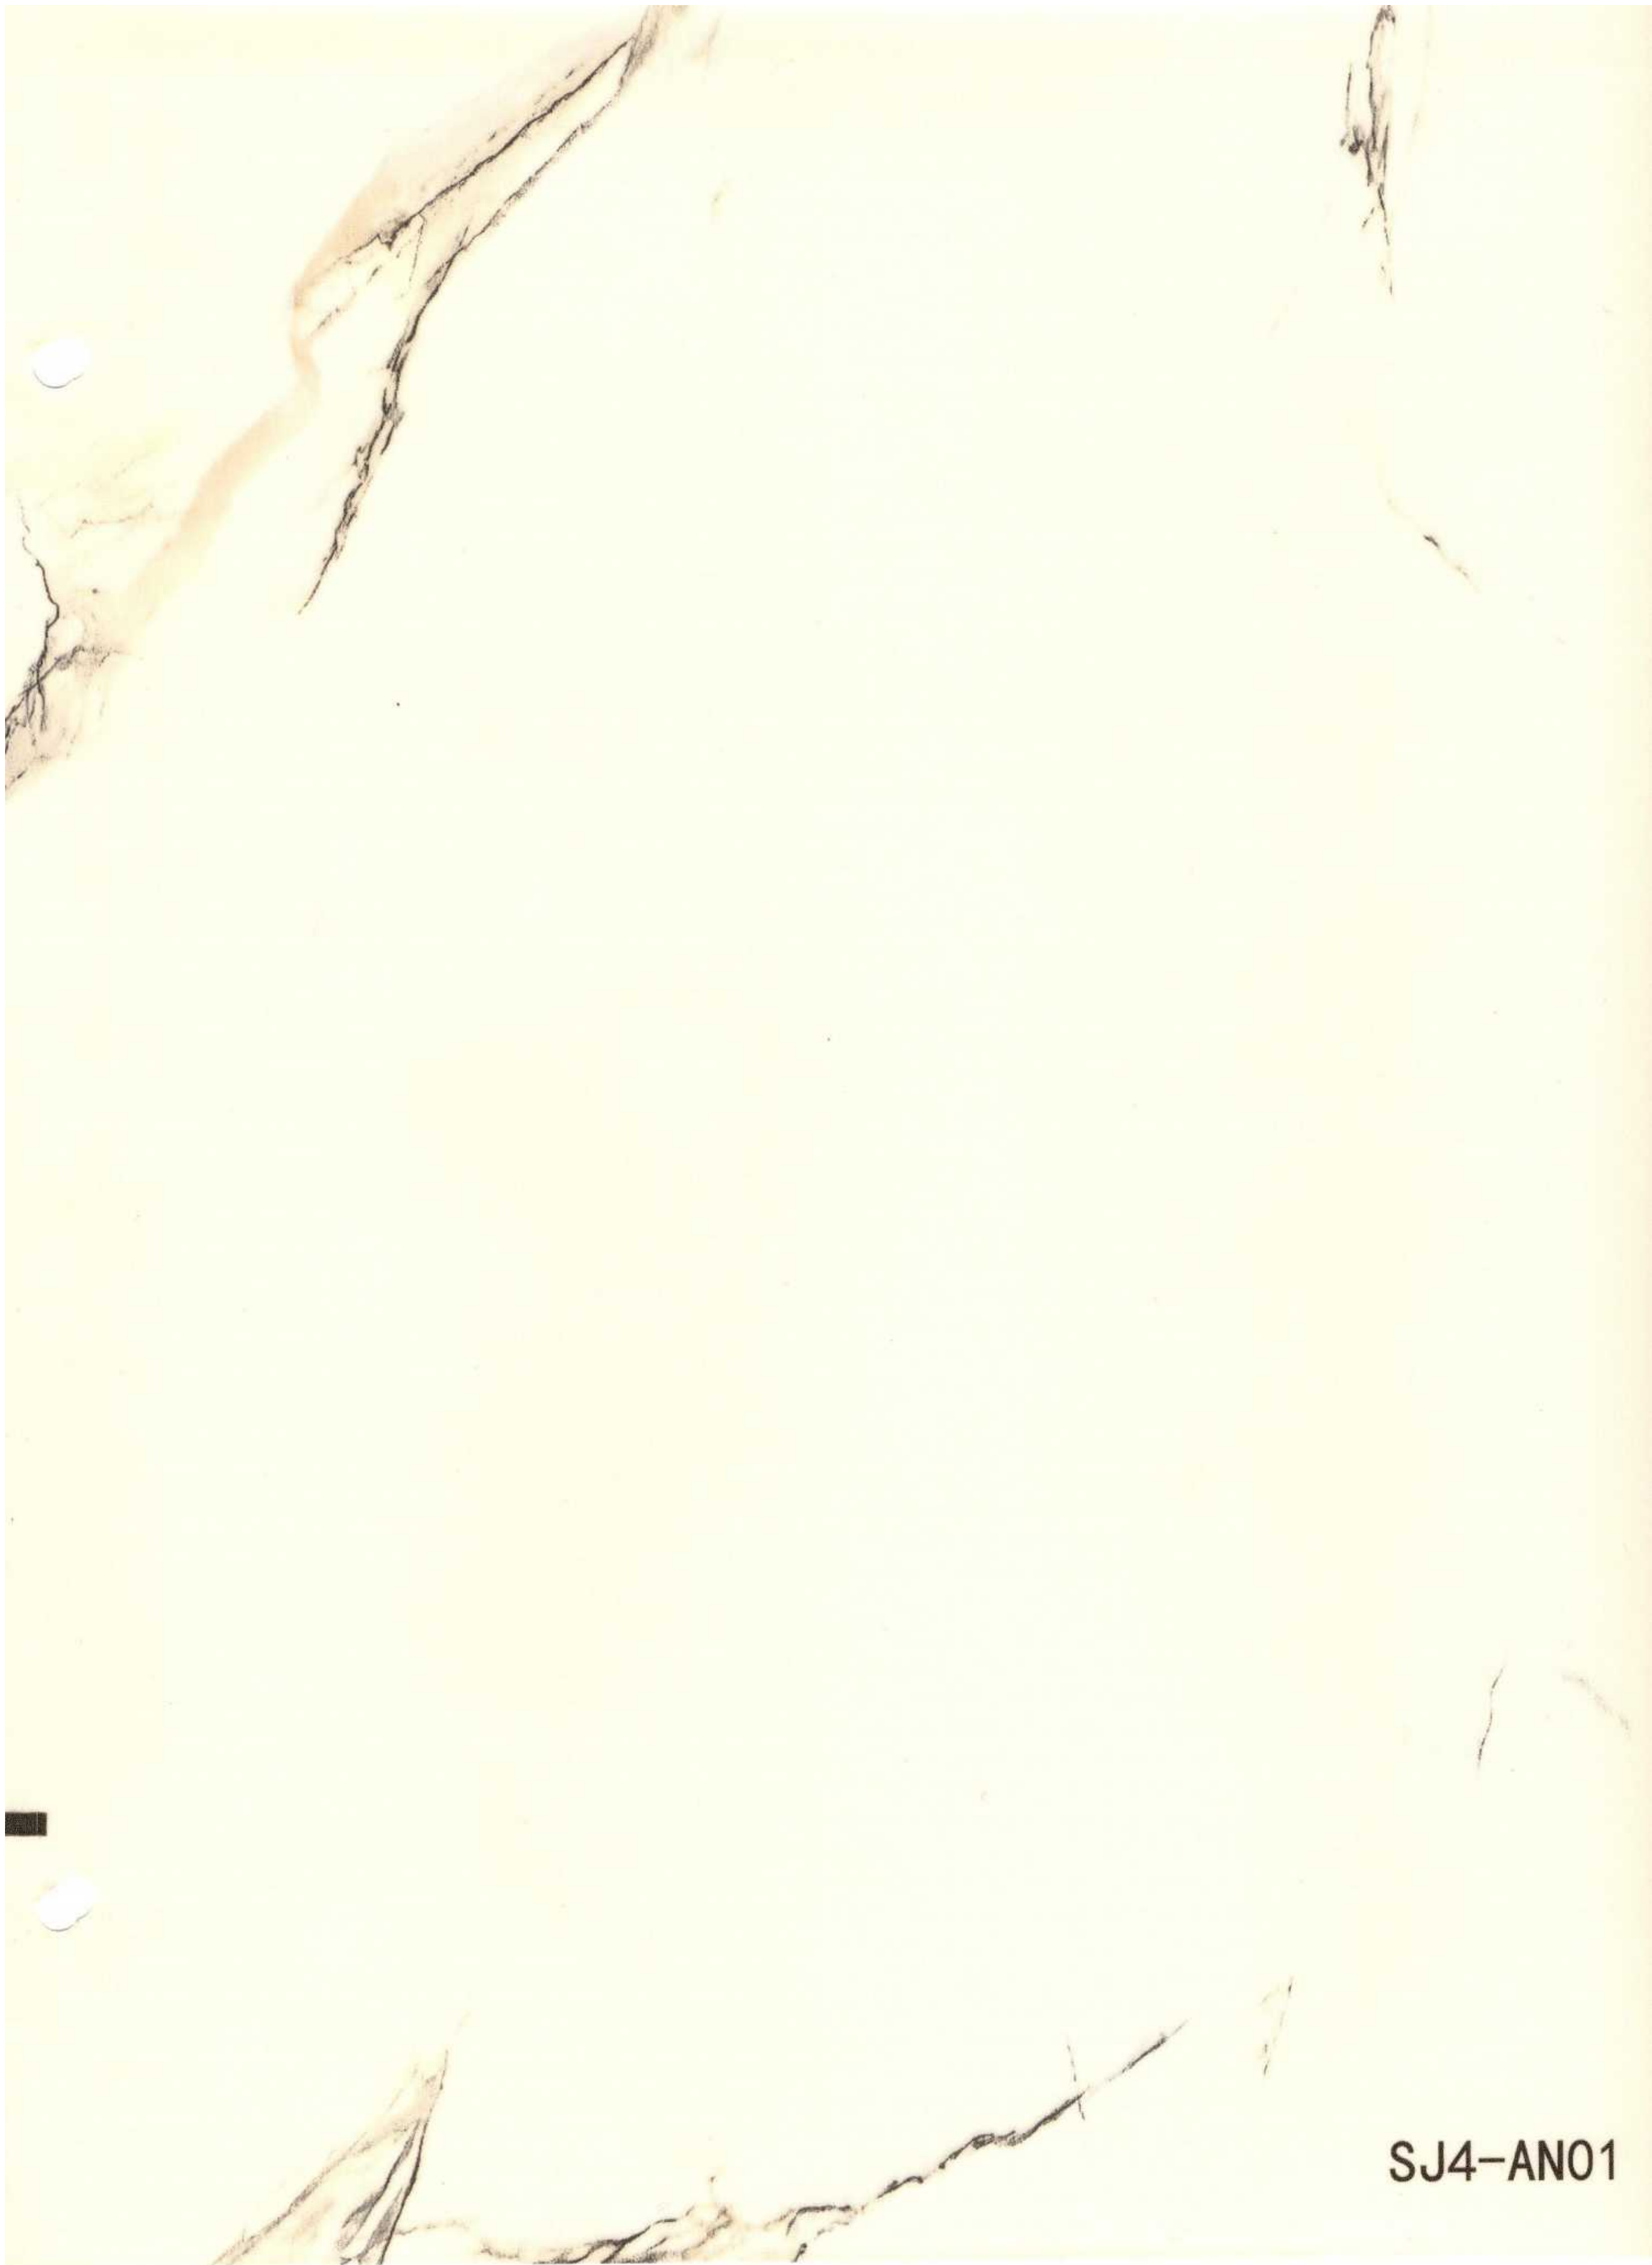


SJ4-AN01



SJ4-AN02

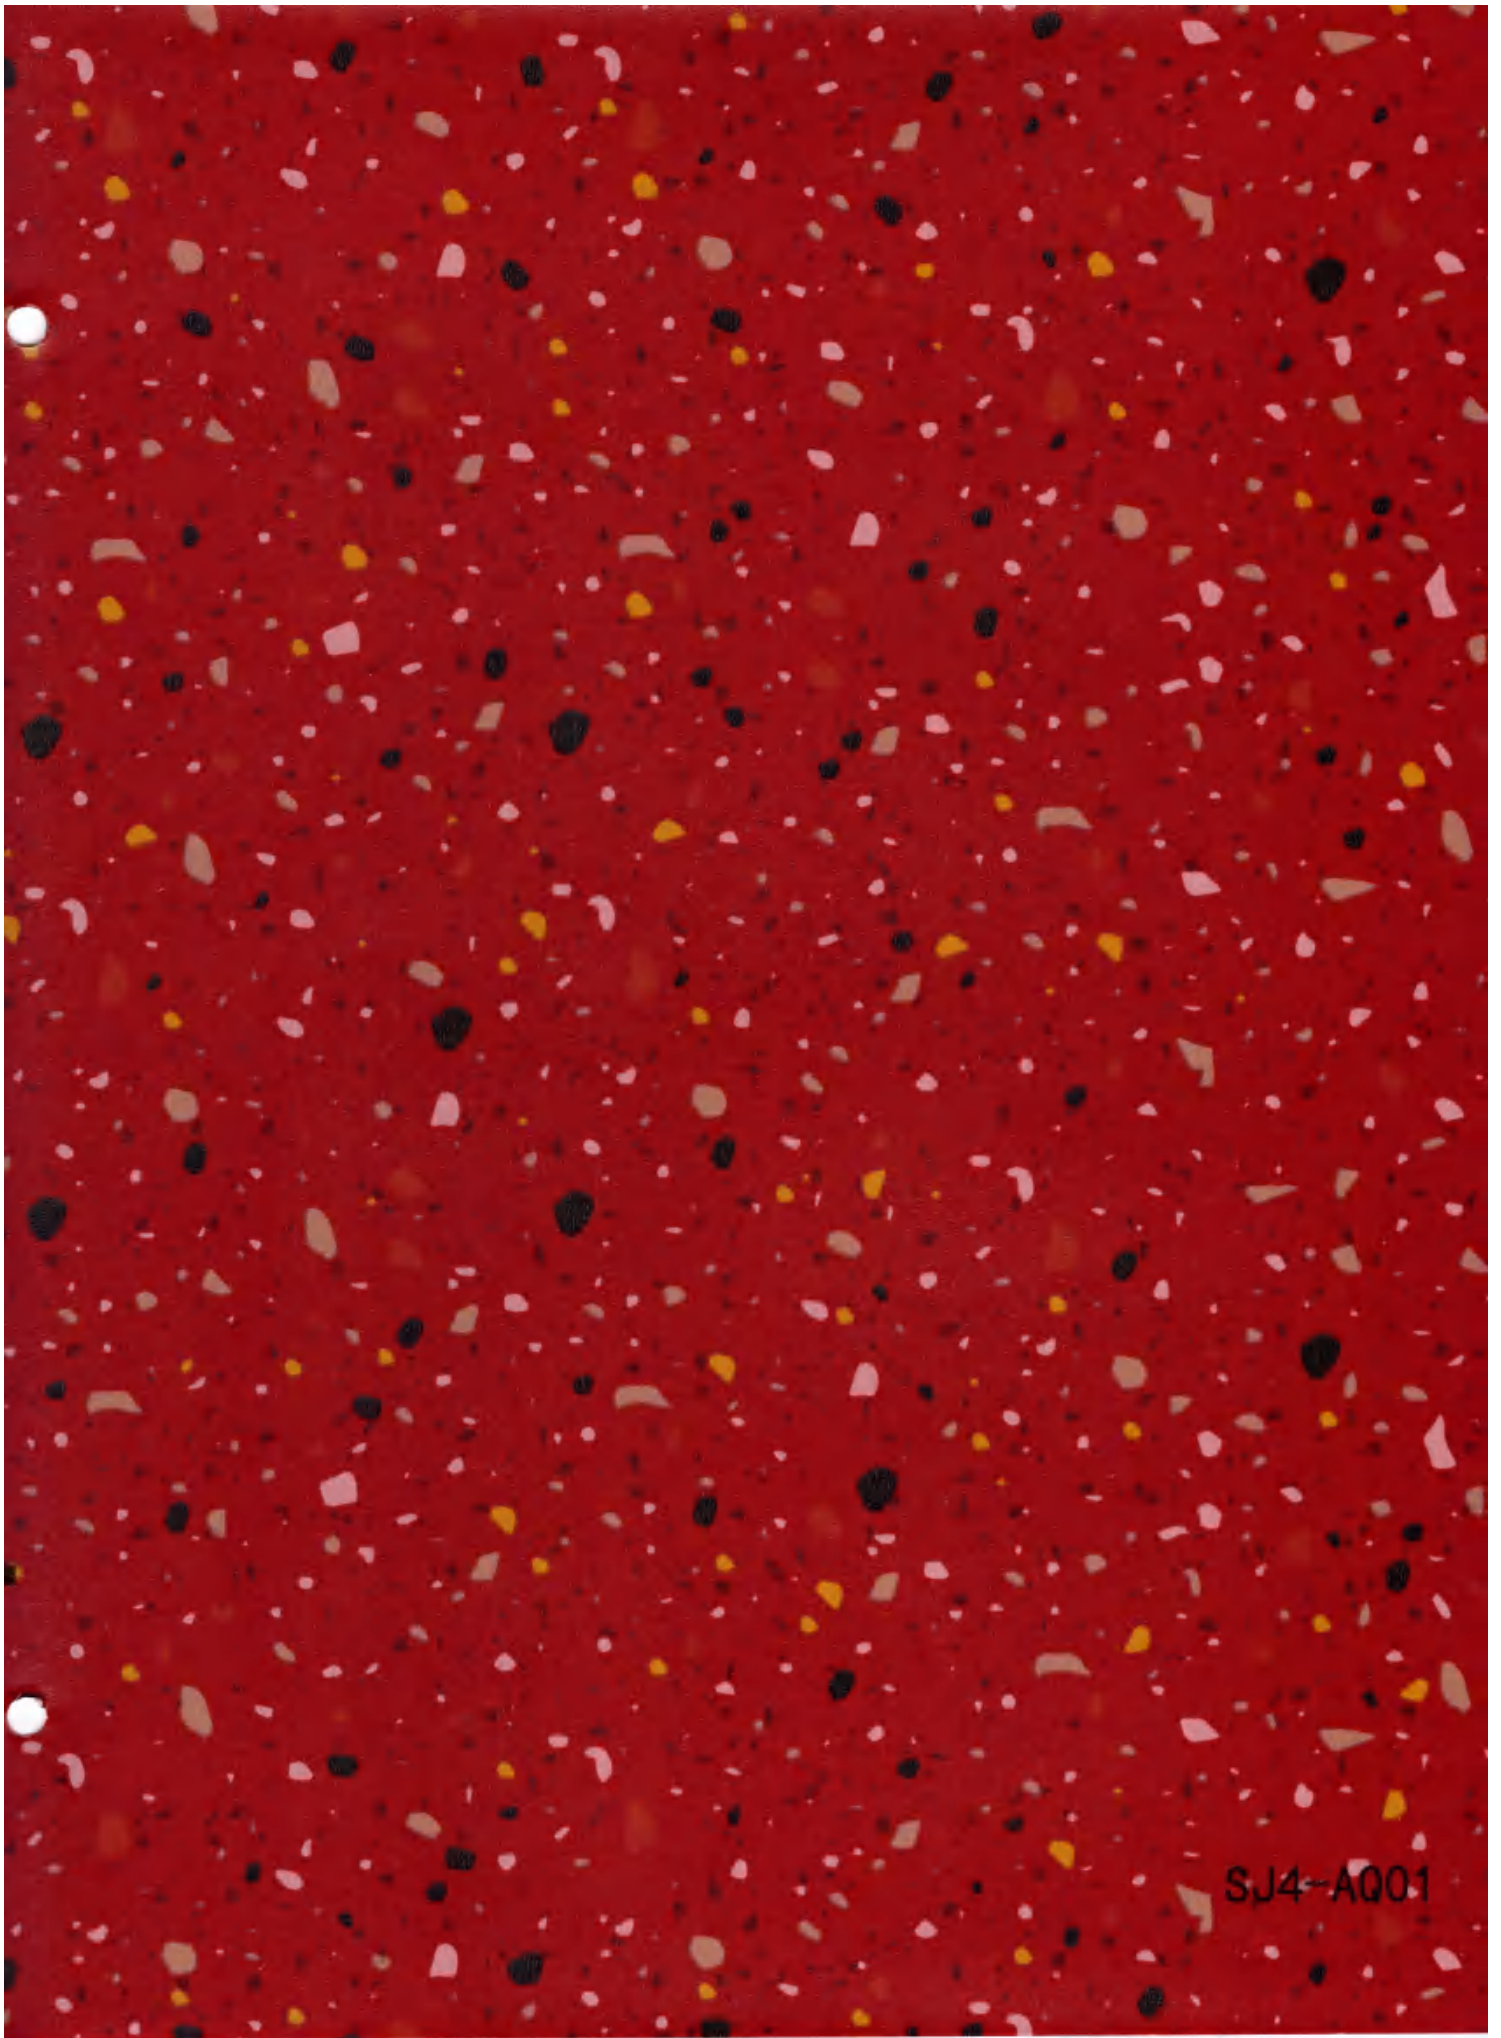

SJ4-A001

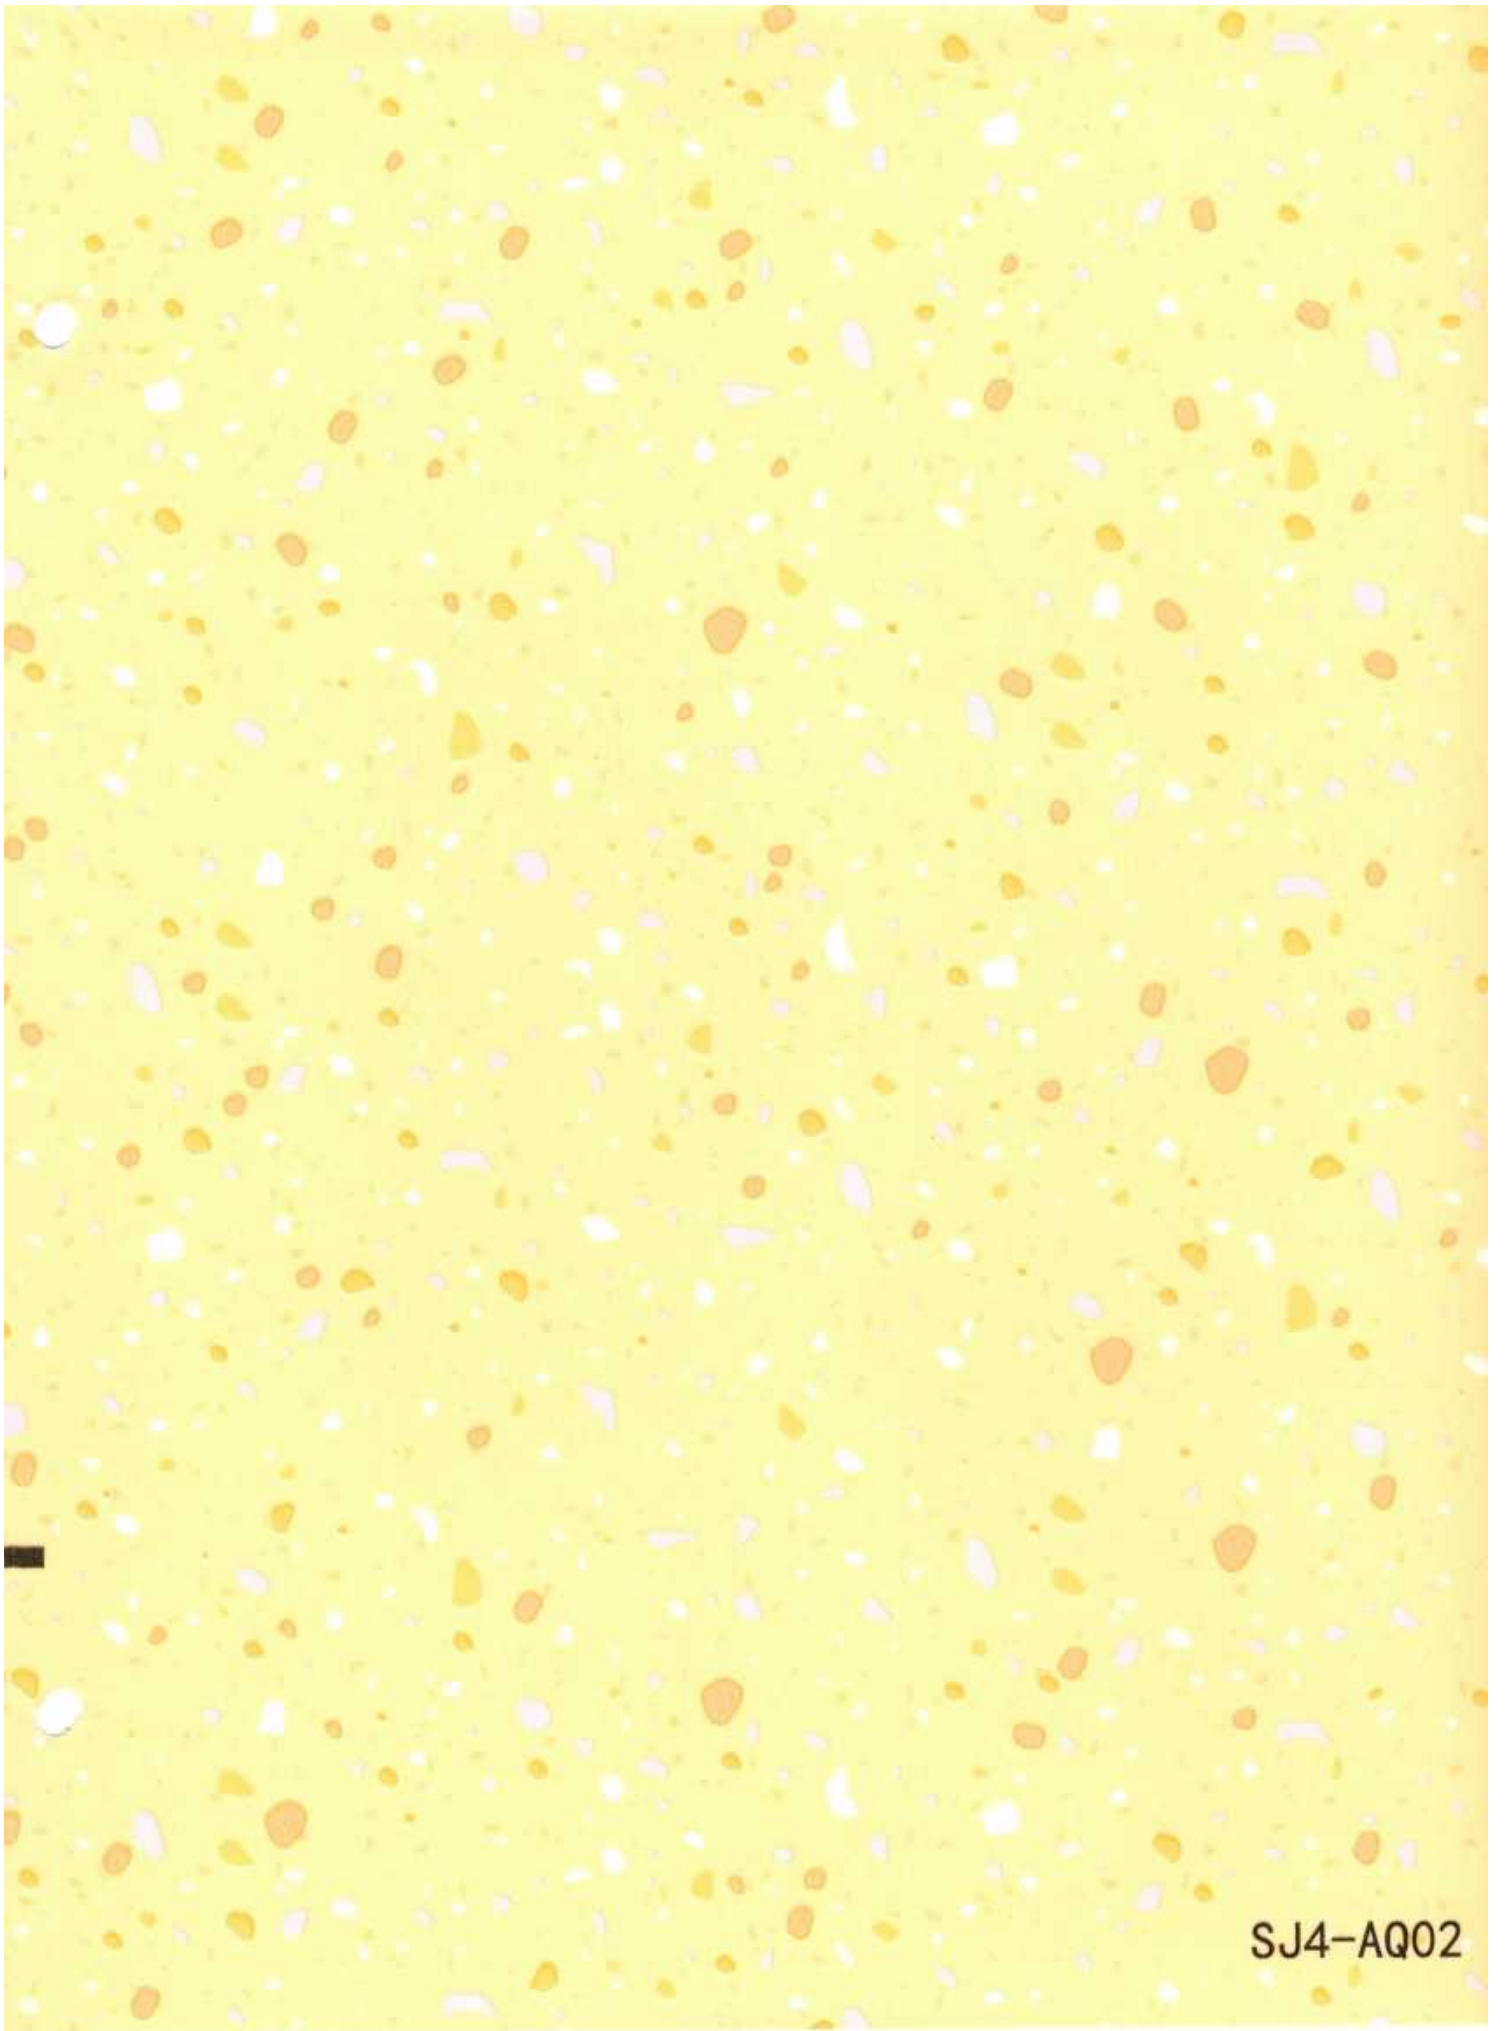

SJ4-AQ02



SJ4-AQ03